




Lubrication Points

ITEM NO.	DESCRIPTION	TYPE OF LUBRICANT	FRESH WATER FREQUENCY	SALT WATER FREQUENCY		
1	Throttle/Shift linkage Pivot Points	Quicksilver 2-4-C Marine Lubricant 100 Hours of Use or Once in Season	100 Hours of Use or Once in Season			
2	Upper Shift Shaft					
3	Swivel Pin					
4	Ride Guide Steering Cable					
5	Tilt Tube/Co-Pilot					
6	Steering Link Rod Pivot Points	SAE 30W Motor Oil				
7	Propellor Shaft	Quicksilver Special Lubricant 101 Anti- Corrosion Grease				
8	Starter Motor Pinion Gear	SAE 10W Motor Oil				
9 *	Gear Housing Bear- ing Carrier	Quicksilver Special Lubricant 101				
10 •	Gear Housing	Quicksilver Gear Lube				
•	Engine Crankshaft Splines to Drive Shaft Splines	Quicksilver 2-4-C Marine Lubricant	Once in Season			


* Refer to lubrication instructions outlined in **"Salt Water Corrosion - Gear Housing Bearing Carrier and Cover Nut"** of this section (see "Table of Contents").

- Refer to **"Gear Housing Lubrication"** of this section (see "Table of Contents").
- Refer to **"Gear Housing Removal and Installation"** (Section 5).


(S/N-0G589999 & Below)

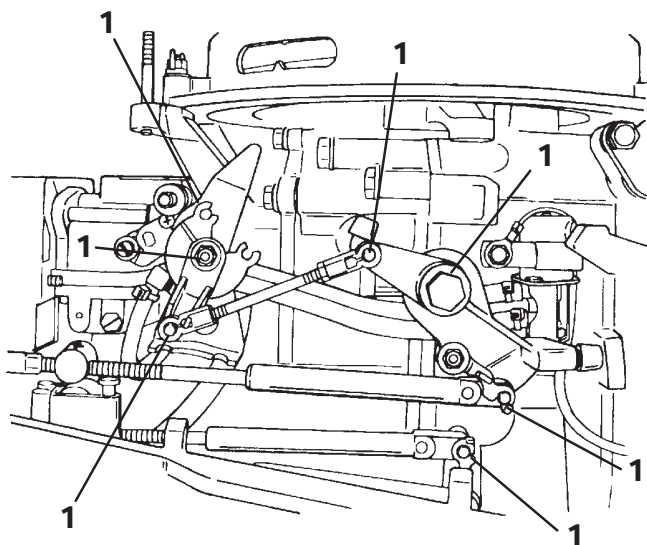

(S/N-0G590000 & Above)

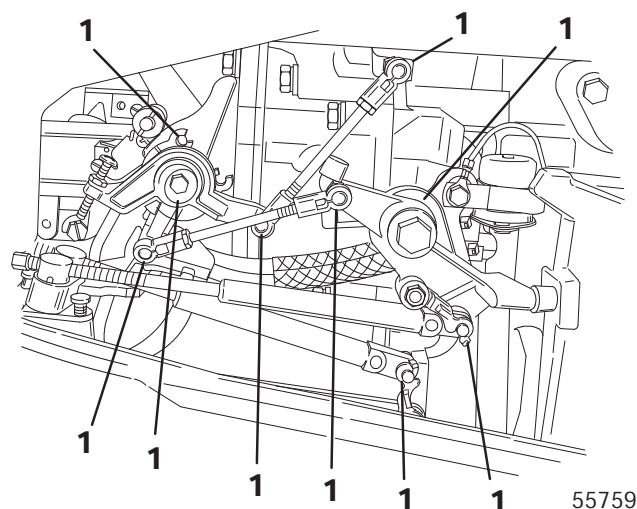


55759

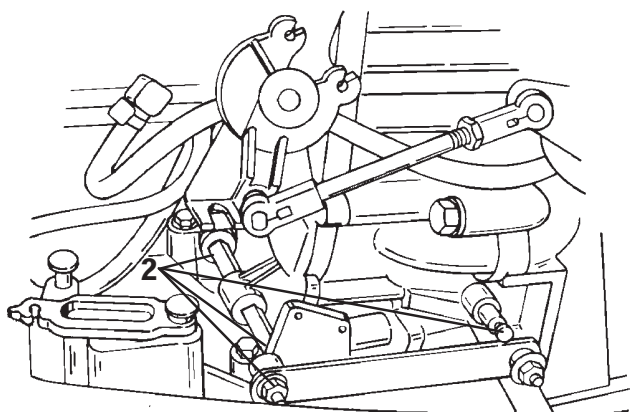

52662

2 - Upper Shift Shaft Lubrication

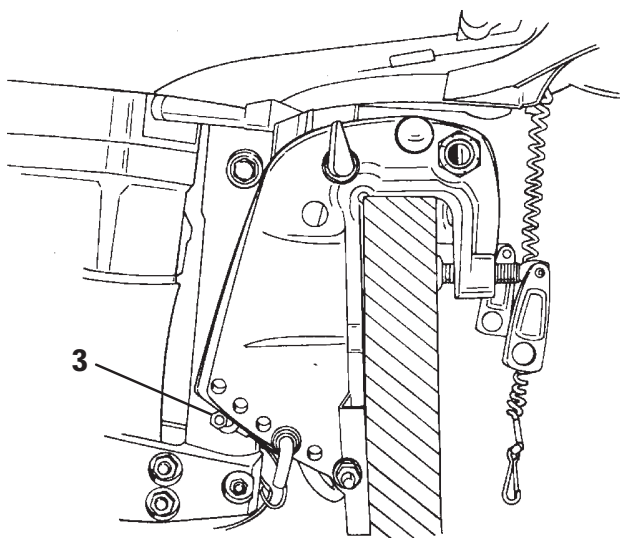


3 - Swivel Pin Grease Fittings

WARNING


Core of steering cable (transom end) must be fully retracted into cable housing before lubricating cable. If cable is lubricated while extended, hydraulic lock of cable could occur.

With core of Ride Guide Steering cable (transom end) fully retracted, lubricate transom end of steering cable thru grease fitting and exposed portion of cable end with Quicksilver 2-4-C Marine Lubricant. Lubricate all pivot points with SAE 30W engine oil.


Electric and Remote Control Models

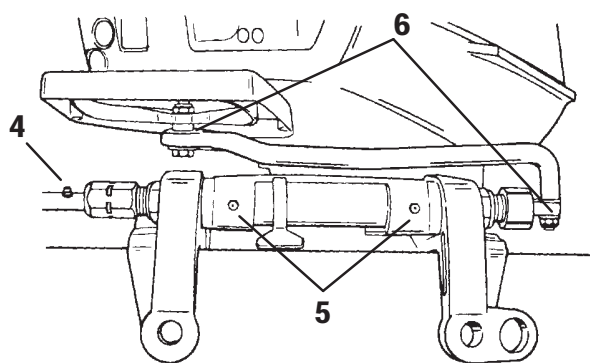

Tiller Handle Models

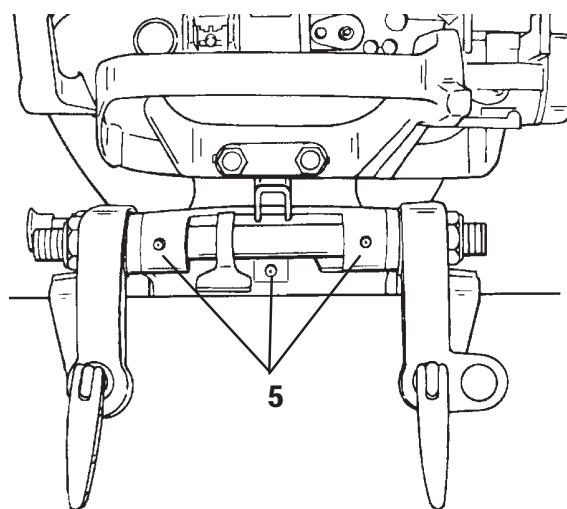

- 4 - Ride Guide Steering Grease Fitting
- 5 - Tilt Tube/Co-Pilot Grease Fitting
- 6 - Steering Link Rod Pivot Point Lubrication

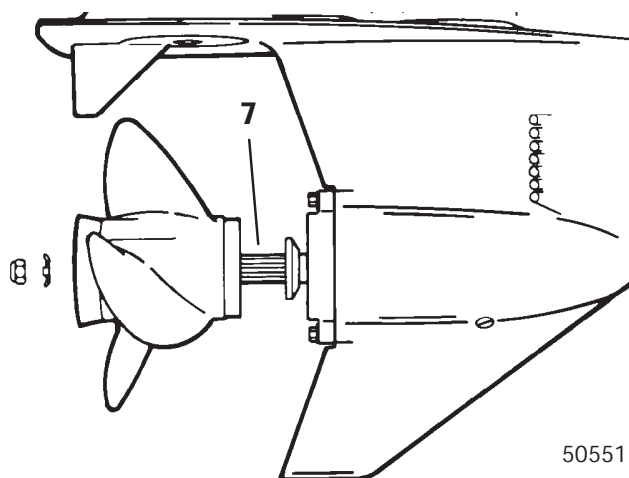

50551

7 - Propeller Shaft Lubrication