

5. VERTICAL SHAFT / BEVEL GEAR

a. DISASSEMBLY / ASSEMBLY

- 1) Remove the propeller / propeller shaft holder assembly (P.11-1).
- 2) Remove the gear case assembly (P.11-10) and water pump (P.11-12).



