




Removal

⚠ WARNING

To prevent accidental engine starting, remove (and isolate) spark plug leads from spark plugs before removing gear housing.

IMPORTANT: 90 hp (4-Stroke) models, when removing or installing gearcase carefully guide driveshaft through drive shaft bushing to avoid scoring bushing surface.

1. Remove (and isolate) spark plug leads from spark plugs.
2. Shift engine into forward gear.
3. Tilt engine to full "Up" position.
4. Remove 4 fasteners.
5. Remove locknut and washer.
6. Remove gear housing.

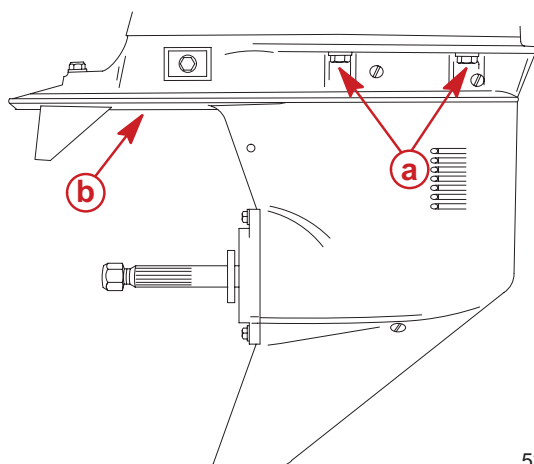

53992

- a** - Fasteners (2 Each Side)
b - Locknut and Washer