


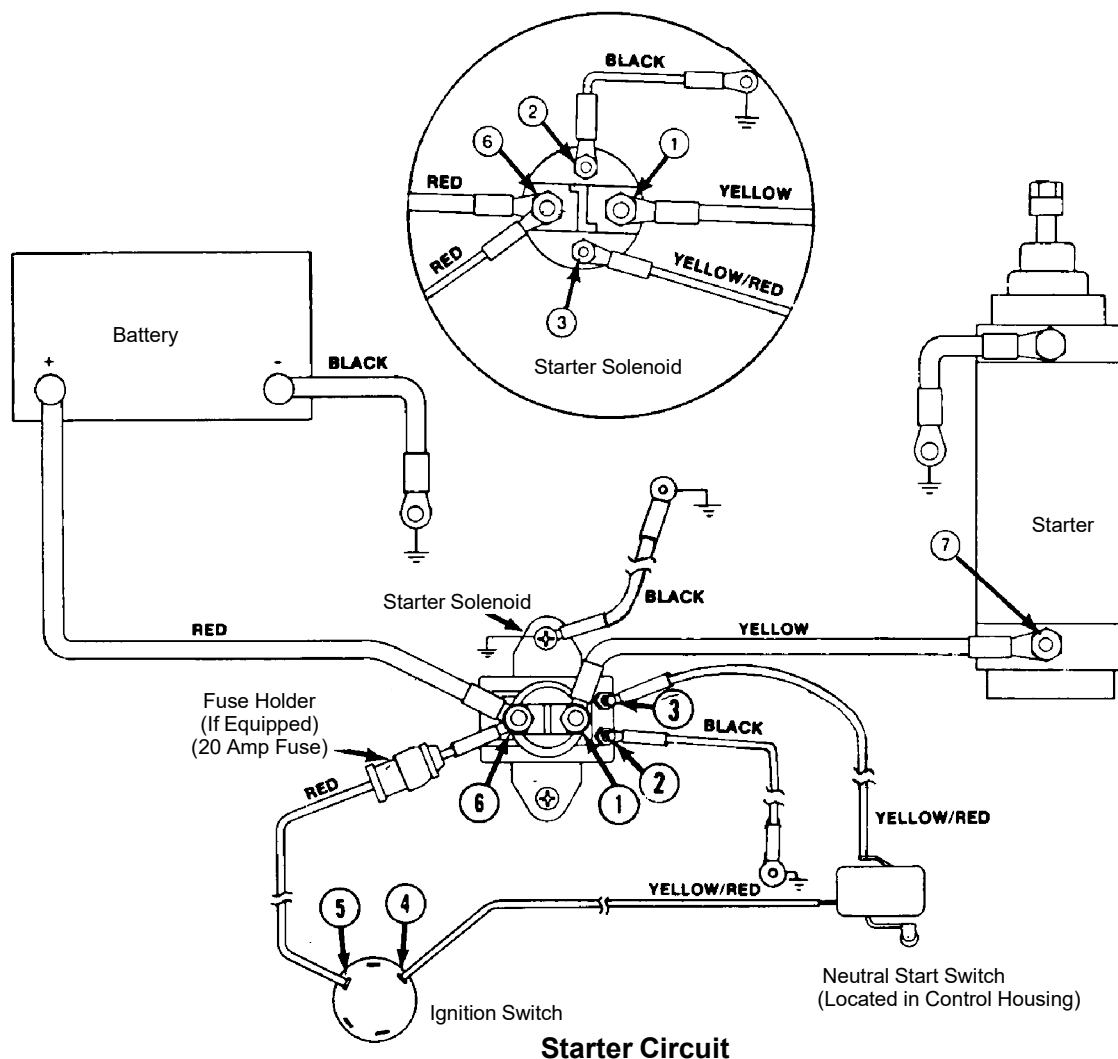

Starting Circuit Troubleshooting Flow Chart

Starter Motor Does Not Turn

SAFETY WARNING: Disconnect BLACK (starter motor) cable from starter solenoid test point 1 BEFORE making tests 1-thru-7 to prevent unexpected engine cranking.

TEST 1


Use an ohmmeter (R x 1 scale) and connect meter leads between NEGATIVE (–) battery post and common powerhead ground.

No continuity indicated; there is an open circuit in the BLACK negative (–) battery cable between the negative (–) battery post and the powerhead.

- Check cable for loose or corroded connections.
- Check cable for open.

Continuity Indicated

Proceed to TEST 2, on next page

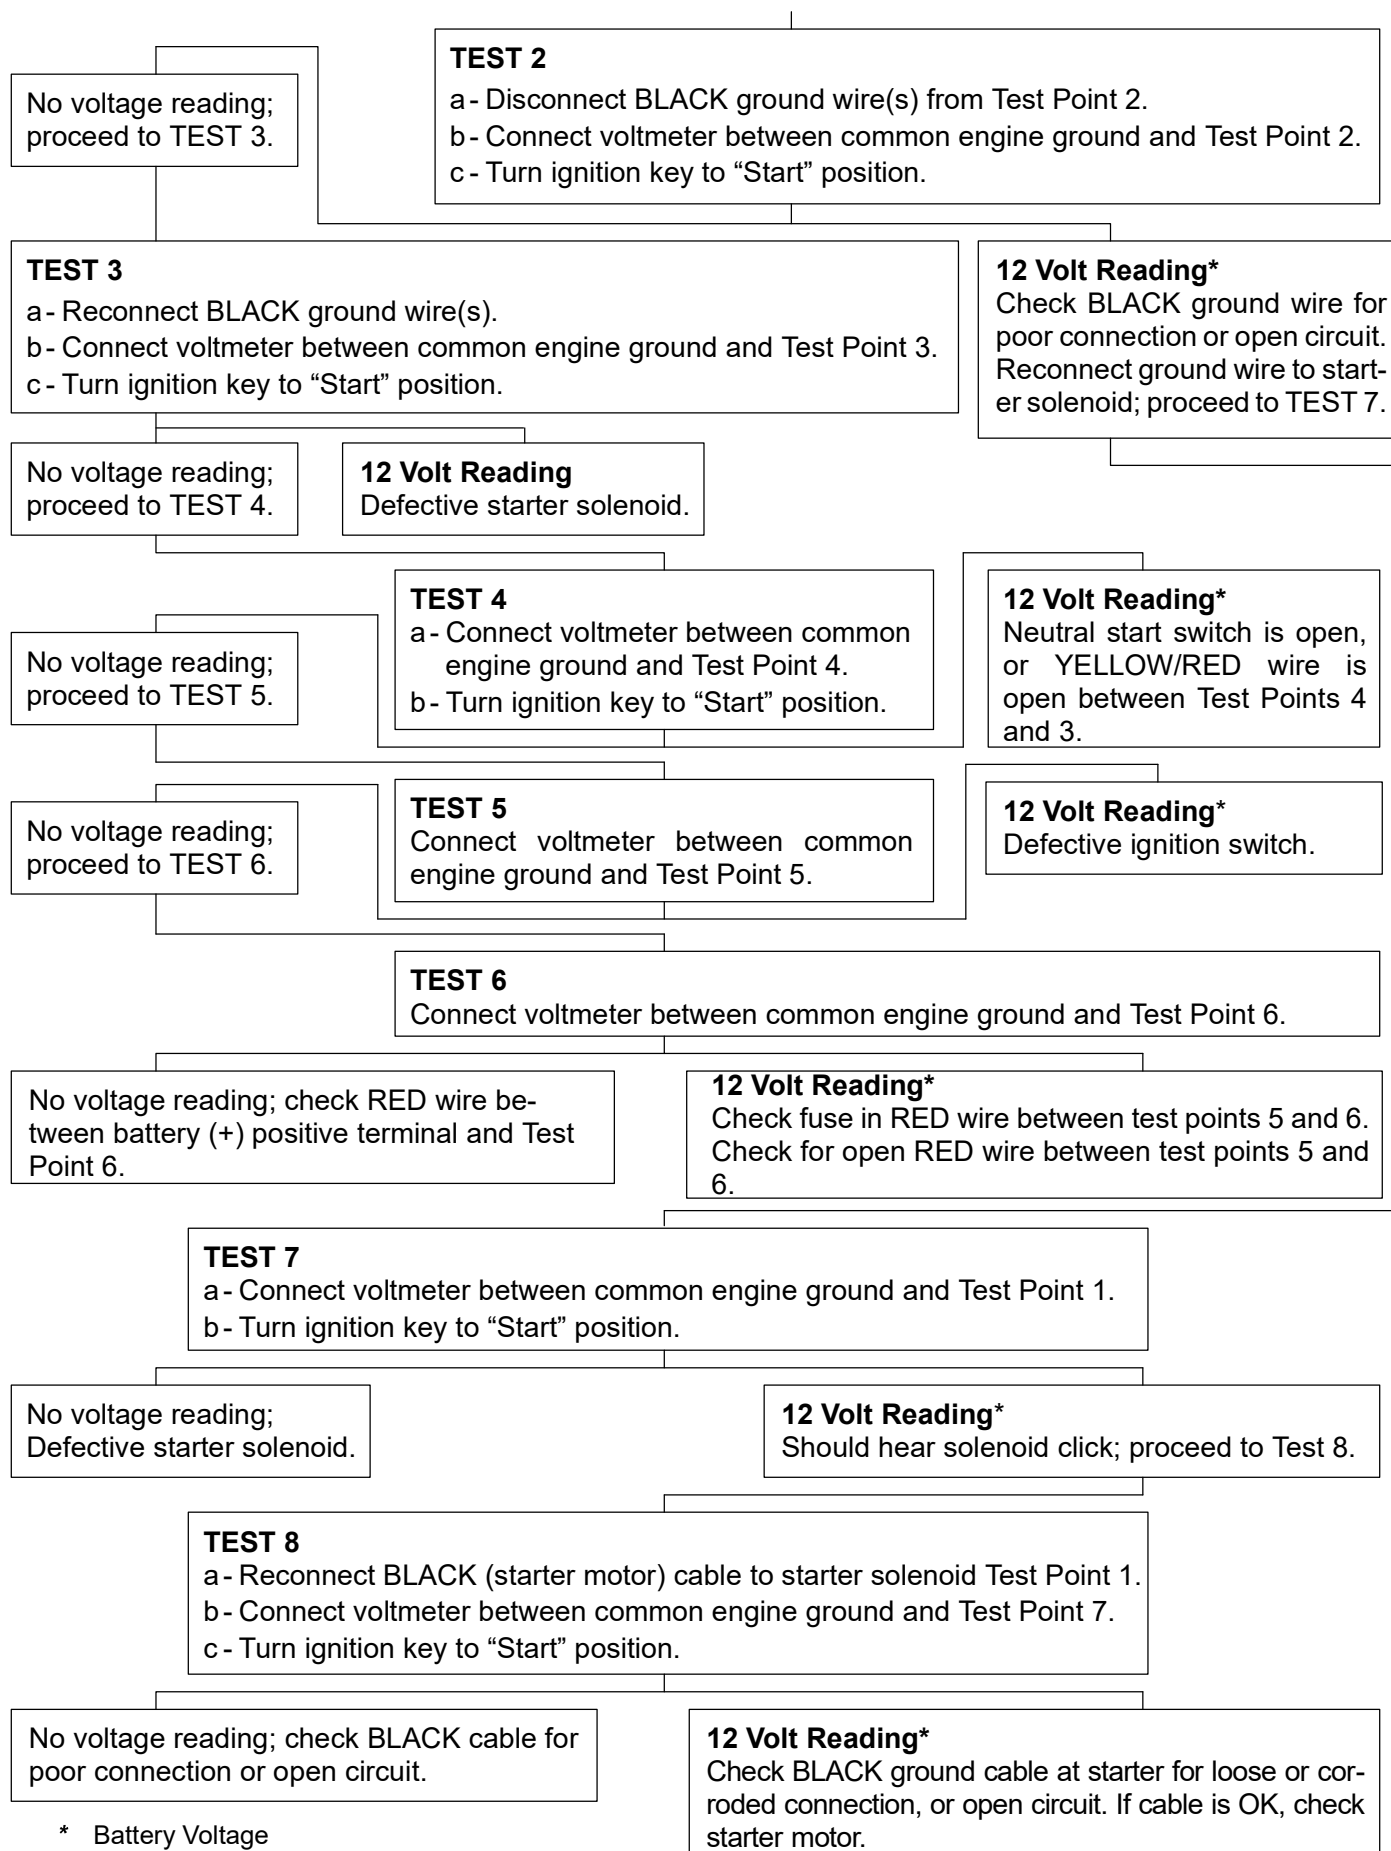

* Battery Voltage