


Wiring Colors for MerCruiser

BIA COLOR CODE AND ABBREVIATIONS	WHERE USED
BLACK (BLK)	All Grounds
BROWN (BRN)	Reference Electrode-MerCathode
ORANGE (ORN)	Anode Electrode-MerCathode
LIGHT BLUE/WHITE (LIT BLU / WHT)	Trim- "Up" Switch
GRAY (GRY)	Tachometer Signal
GREEN/WHITE (GRN / WHT)	Trim -"Down" Switch
TAN (TAN)	Water Temperature Sender to Gauge
LIGHT BLUE (LIT BLU)	Oil Pressure Sender to Gauge
PINK (PNK)	Fuel Gauge Sender to Gauge
BROWN/WHITE (BRN / WHT)	Trim Sender to Trim Gauge
PURPLE/WHITE (PUR / WHT)	Trim-"Trailer" Switch
RED (RED)	Unprotected Wires from Battery
RED/PURPLE (RED / PUR)	Protected (Fused) Wires from Battery
RED/PURPLE (RED / PUR)	Protected (+12V) to Trim Panel
ORANGE (ORN)	Alternator Output
PURPLE/YELLOW (PUR / YEL)	Ballast Bypass
PURPLE (PUR)	Ignition Switch (+12 V)
YELLOW/RED (YEL / RED)	Starter Switch to Starter Solenoid to Neutral Start Switch


Wiring Diagrams

3.0L Engine Wiring Diagram (Breaker Points Ignition)

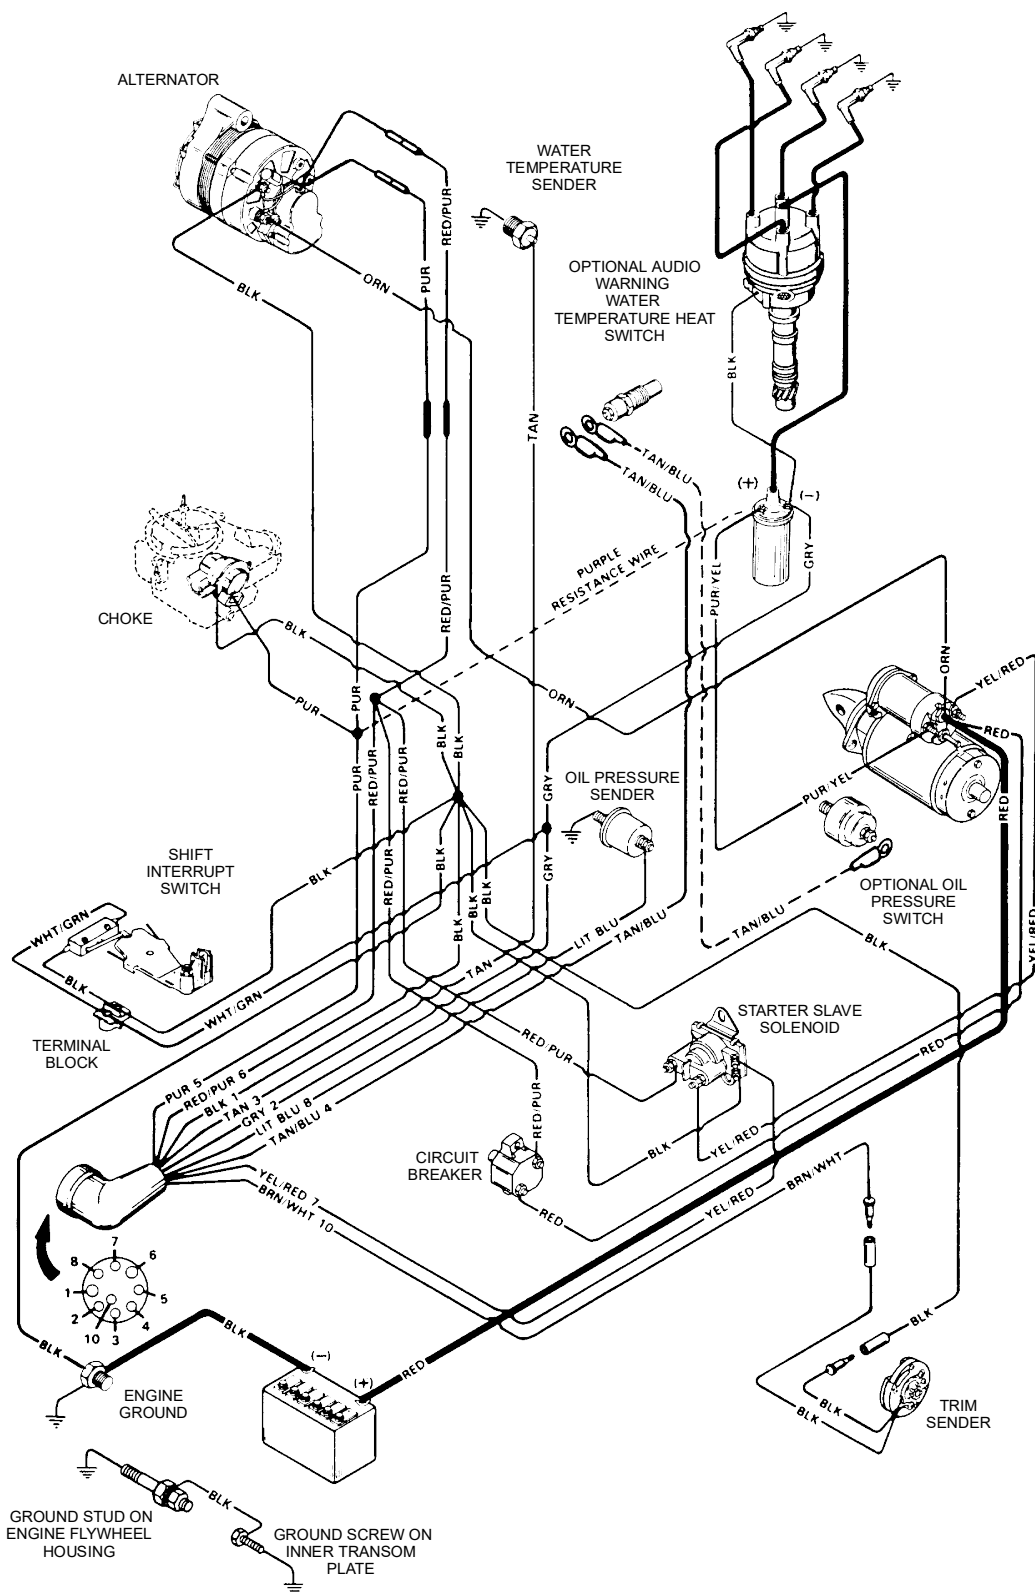


50726

3.0L/3.0LX Engine Wiring Diagram (DDIS Ignition)

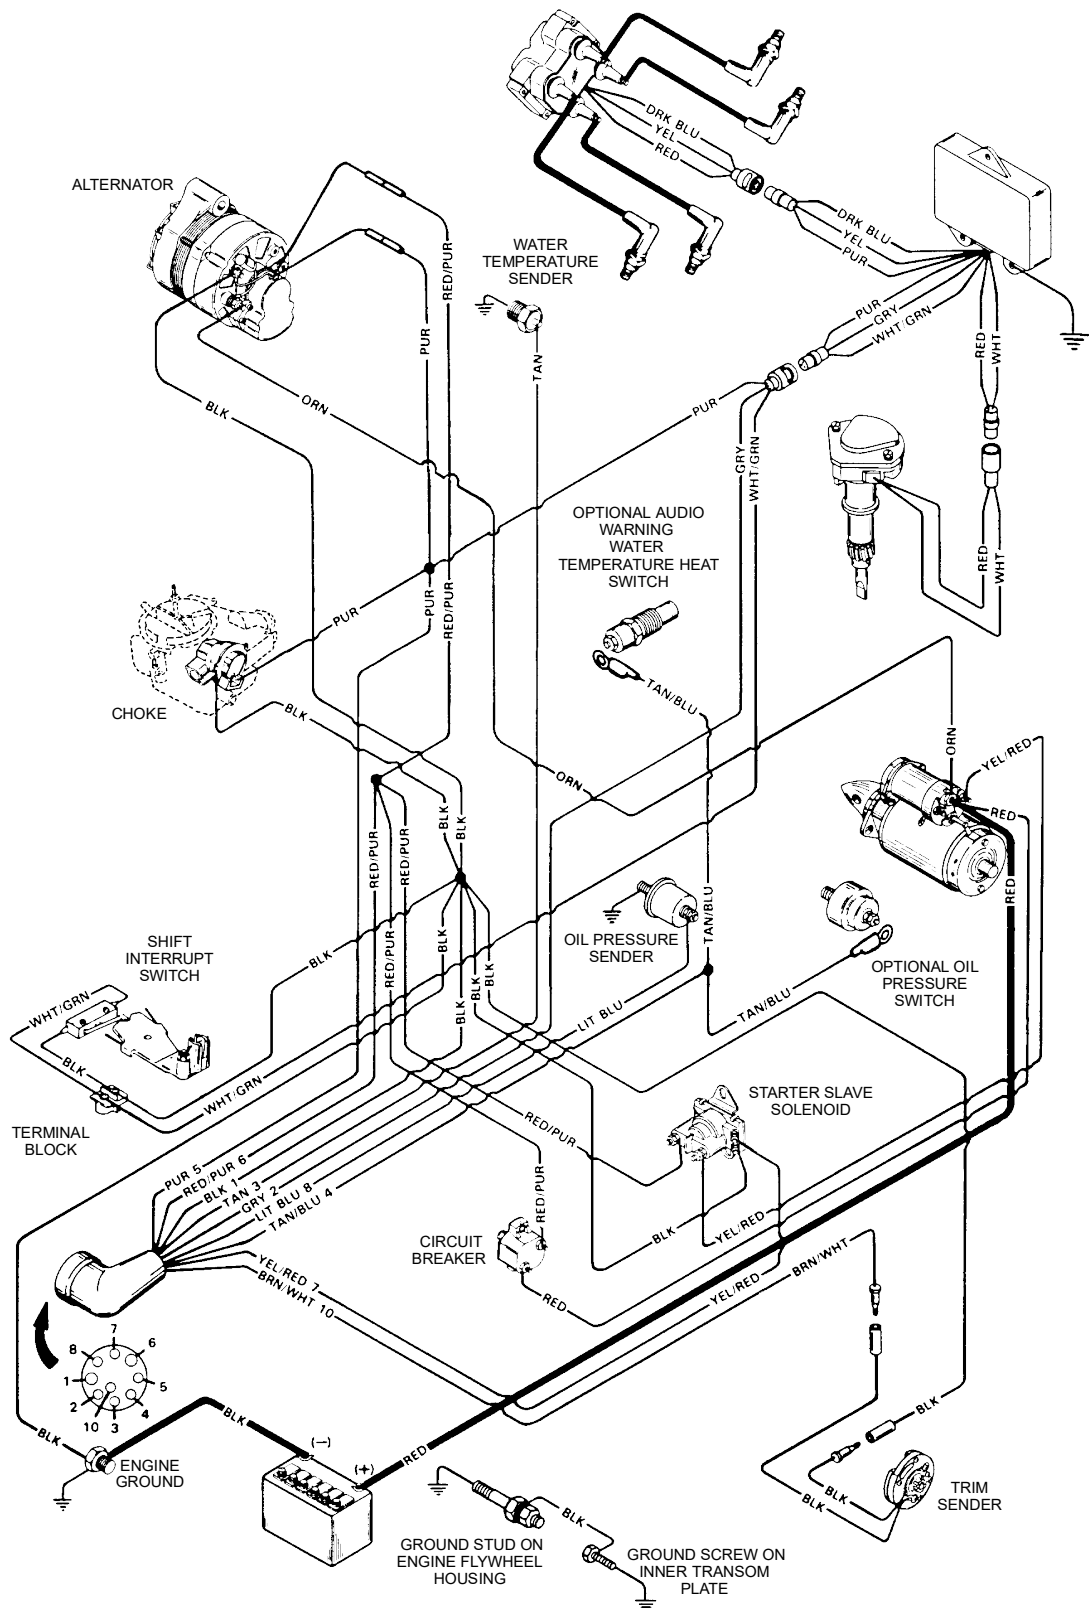

50727

3.0L/3.0LX Engine Wiring Diagram (EST Ignition)

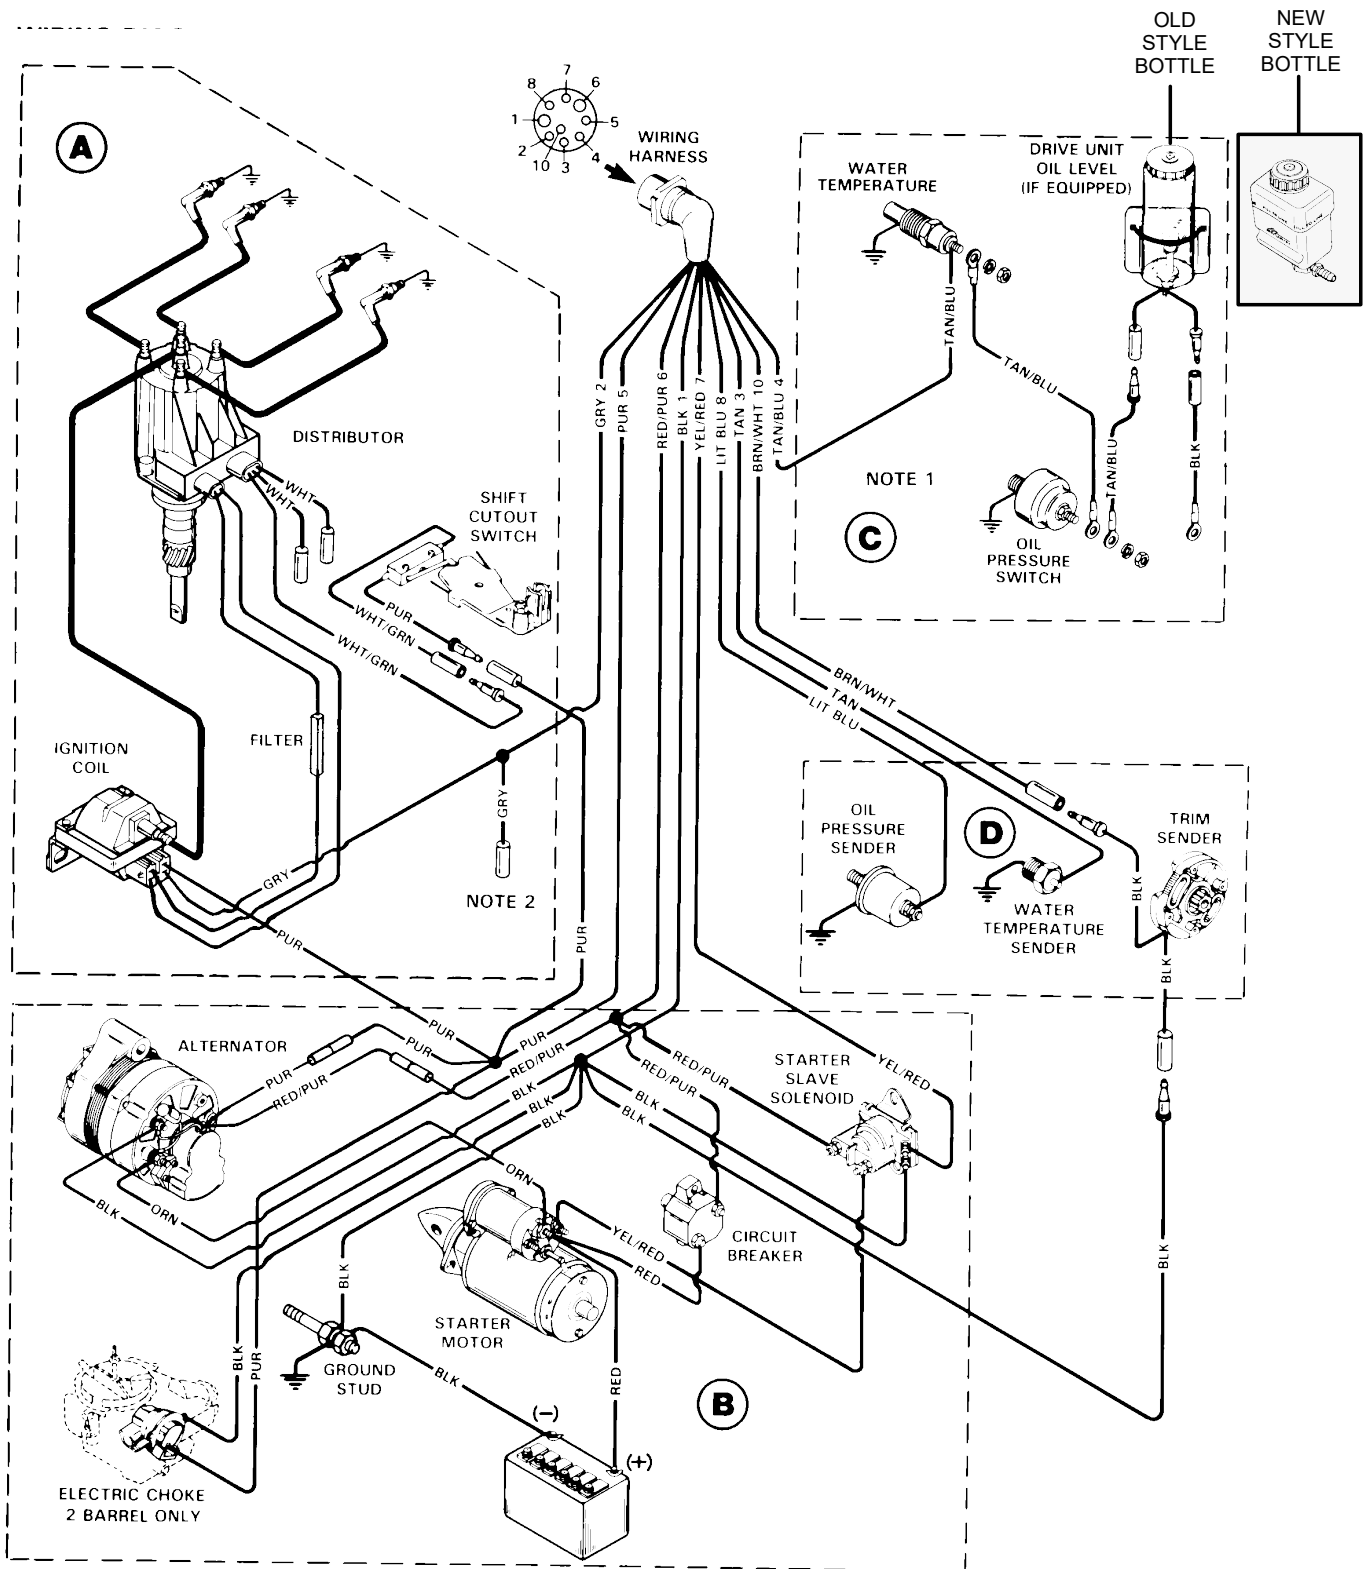

NOTE 1: Audio Warning System Standard On 3.0LX Models

NOTE 2: Gray lead for use with service tachometer.

A - Ignition Components

B - Starting, Charging and Choke Components

C - Audio Warning System Components

D - Instrumentation Components