




DISASSEMBLING/ASSEMBLING THE FUEL PUMP

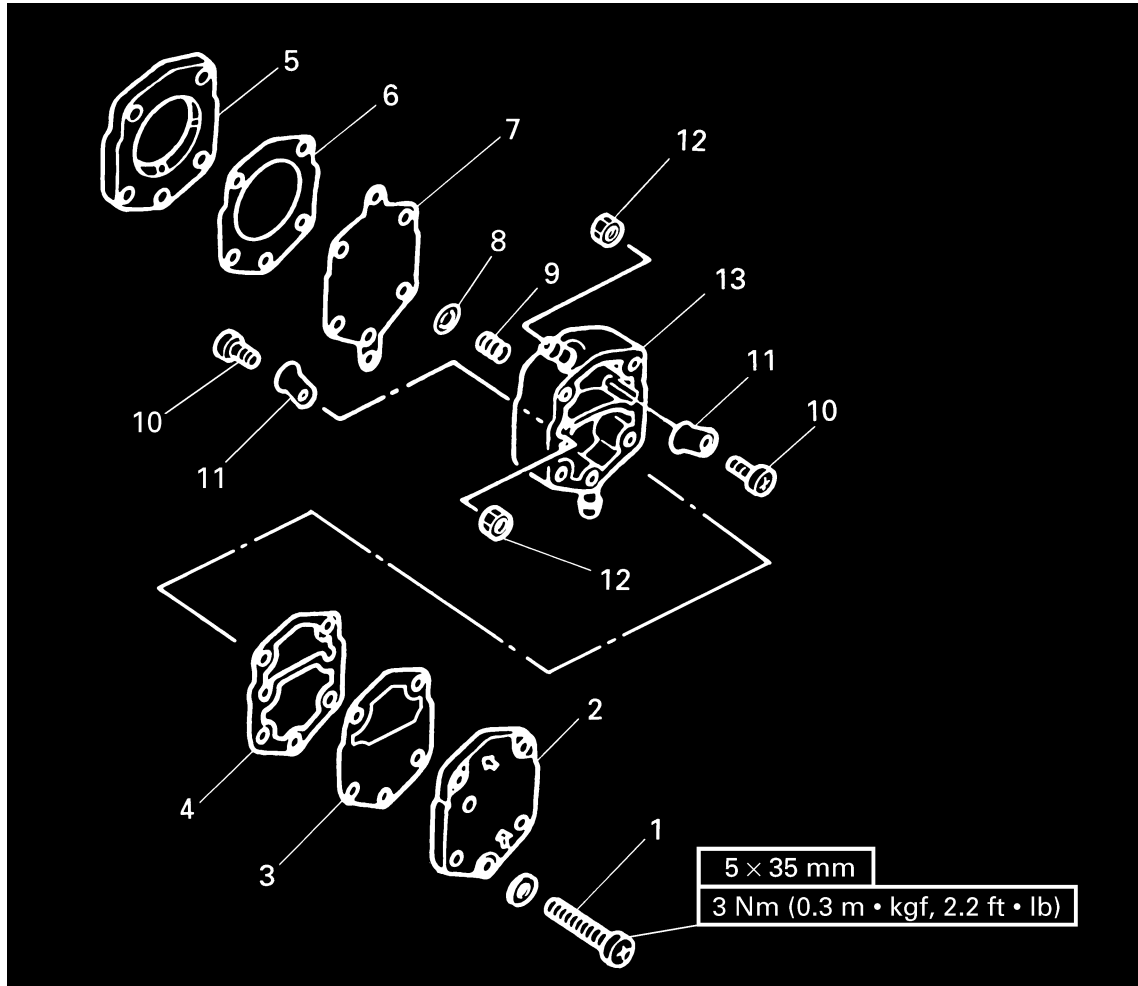

Order	Job/Part	Q'ty	Remarks
1	Screw	3	
2	Diaphragm body	1	
3	Diaphragm	1	
4	Gasket	1	Not reusable
5	Fuel pump base	1	
6	Gasket	1	Not reusable
7	Diaphragm	1	
Continued on next page.			