



75, 80, 90 hp

- ① Crank position sensor coupler
- ② Fuel enrichment valve ^{*1}
- ③ Clamp
- ④ Clamp
- ⑤ Wire harness coupler
- ⑥ Trim sensor coupler ^{*2}
- ⑦ Oil level sensor coupler ^{*3}
- ⑧ Clamp
- ⑨ Ground lead from power trim and tilt relay ^{*2}
- ⑩ Ground lead from wire harness
- ⑪ Ground lead from rectifier/regulator
- ⑫ Charge coil coupler
- ⑬ Power trim and tilt relay coupler ^{*2}
- ⑭ Pulser coil coupler
- ⑮ Ground lead from starter relay
- ⑯ Ground lead from CDI unit

- A To electrothermal valve ^{*4}
- B To trim sensor ^{*2}
- C To power trim and tilt motor ^{*2}
- D To oil level sensor ^{*3}
- E To meter
- F To starter motor
- G To trailer switch ^{*2}
- H To neutral switch ^{*5}

- B : Black
 Br : Brown
 G : Green
 Gy : Gray
 L : Blue
 Lg : Light green
 O : Orange
 P : Pink
 R : Red
 Sb : Sky blue
 W : White
 Y : Yellow

*1. For C75TR

*2. For PTT model

*3. For oil injection model

*4. Except for C75TR

*5. For P75TH/75CEHTO, 90AEHD, 90TR/90AETO, B90TR/90AETO

