

NEUTRAL SWITCH

Inspect continuity of neutral switch.



09930-99320 : Digital tester



Tester range : (Continuity)

Neutral switch in remo-con box

1. Disconnect neutral switch lead wires in remo-con box.
2. Inspect continuity between switch Brown lead wires while operating remo-con handle.

Shift position	Continuity
Neutral	Yes
Forward	No
Reverse	No

If out of specification, replace neutral switch.

Neutral switch on cylinder block

1. Disconnect neutral switch lead wire connector.
2. Inspect continuity between Yellow/Green and Brown lead wires while operating remo-con handle.

Shift position	Continuity
Neutral	Yes
Forward	No
Reverse	No

If out of specification :

- 1st Check switch position adjustment, readjust if necessary.
- 2nd Replace neutral switch.

NOTE:

After installing neutral switch, check for proper correct function by operating remo-con handle.

