



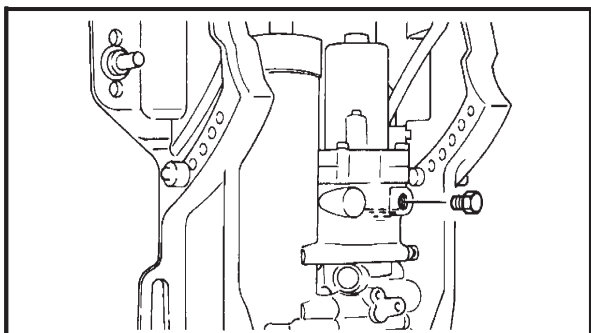

POWER TRIM AND TILT SYSTEM CHECKING THE POWER TRIM AND TILT FLUID LEVEL

⚠ WARNING

To prevent the hydraulic fluid from spurting out due to internal pressure, the outboard should be kept fully tilted up (the tilt ram at full length) while slowly removing the plug screw.

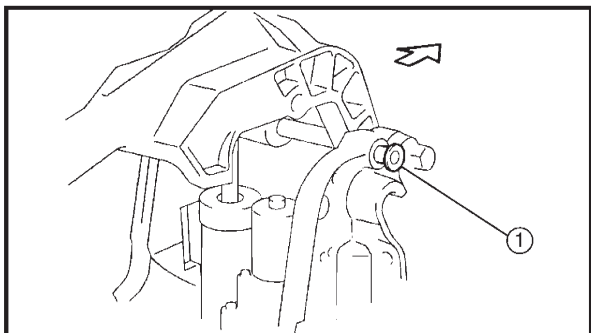

1. Check:

- Power trim and tilt fluid level
Level is low → Add power trim and tilt fluid to the proper level.

Checking steps

- (1) Tilt the outboard all the way up and lock it with the tilt stop levers ①.
- (2) Remove the plug screw.
- (3) Check that the fluid level is directly below the fluid level checking hole.

2. Add:

- Power trim and tilt fluid



Recommended hydraulic fluid
ATF Dexron II



Plug screw
7 Nm (0.7 m•kgf, 5.2 ft•lb)