
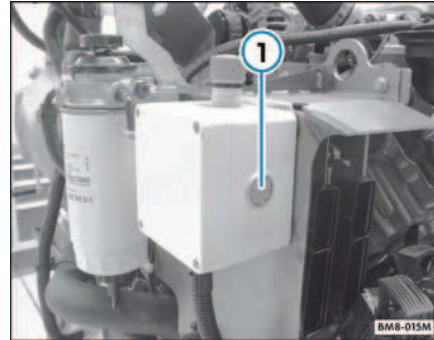


Engine oil renewal

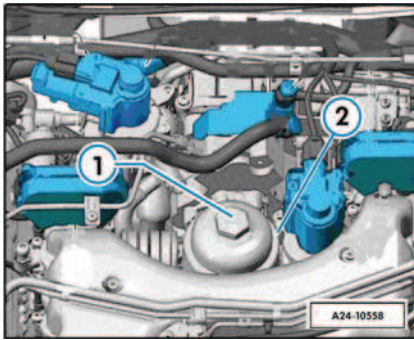

- Loosen the protective cap -1- of the oil filter housing -2- (see illustration above) using a 32 mm socket wrench, so that the return valve opens and the used oil can flow back into the oil sump.

- The supplied oil change hose -3- is already connected on to the union of the oil extraction pump -4- (see illustration below) .

- Route the other end of the hose into the container being used for the oil change.

- With the engine stopped and the ignition switched on, press and hold the button -1- at the right front side of the engine and wait until the engine oil has been fully extracted

