

- 1 - Control Module
- 2 - Control Module Mounting Bolt
- 3 - Stator
- 4 - Trigger
- 5 - Low Oil Switch
- 6 - Shift Switch
- 7 - Fuel Enrichment Solenoid
- 8 - Upper Voltage Regulator
- 9 - Lower Voltage Regulator
- 10 - Regulator Mounting Bolt
- 11 - Solenoid Plate
- 12 - Starter
- 13 - Engine Ground
- 14 - 12V Battery
- 15 - To Trim Pump
- 16 - Trim Up Relay
- 17 - Trim Down Relay
- 18 - Cowl Mounted Trim Switch
- 19 - To Remote Trim Switch
- 20 - Start Solenoid
- 21 - Fuses
- 22 - To Remote Control
- 23 - Aux. Power
- 24 - To Temp. Gauge
- 25 - Temperature Sensor
- 26 - Temperature Switch
- 27 - CDM 5
- 28 - CDM 3
- 29 - CDM 1
- 30 - CDM 6
- 31 - CDM 4
- 32 - CDM 2
- 33 - Engine Ground

1 - Control Module

