




Rectifier Test

⚠ WARNING

Disconnect battery leads from battery before testing rectifier.

NOTE: Rectifier can be tested without removing from engine.

1. Disconnect all wires from terminals on rectifier.
2. Use an ohmmeter (R x 1000 scale) and perform the following test. Refer to illustration for rectifier terminal identification.

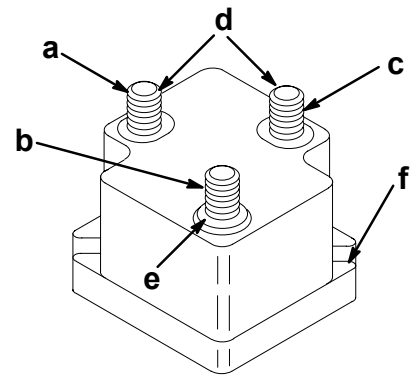

a - Terminal
 b - Terminal
 c - Terminal

d - Stator Terminals
 e - Positive Terminal
 f - Ground

07300

Rectifier Test

