



# 5-70 IGNITION AND ELECTRICAL SYSTEMS

## 1988 DT75 and DT85 Wiring Diagram

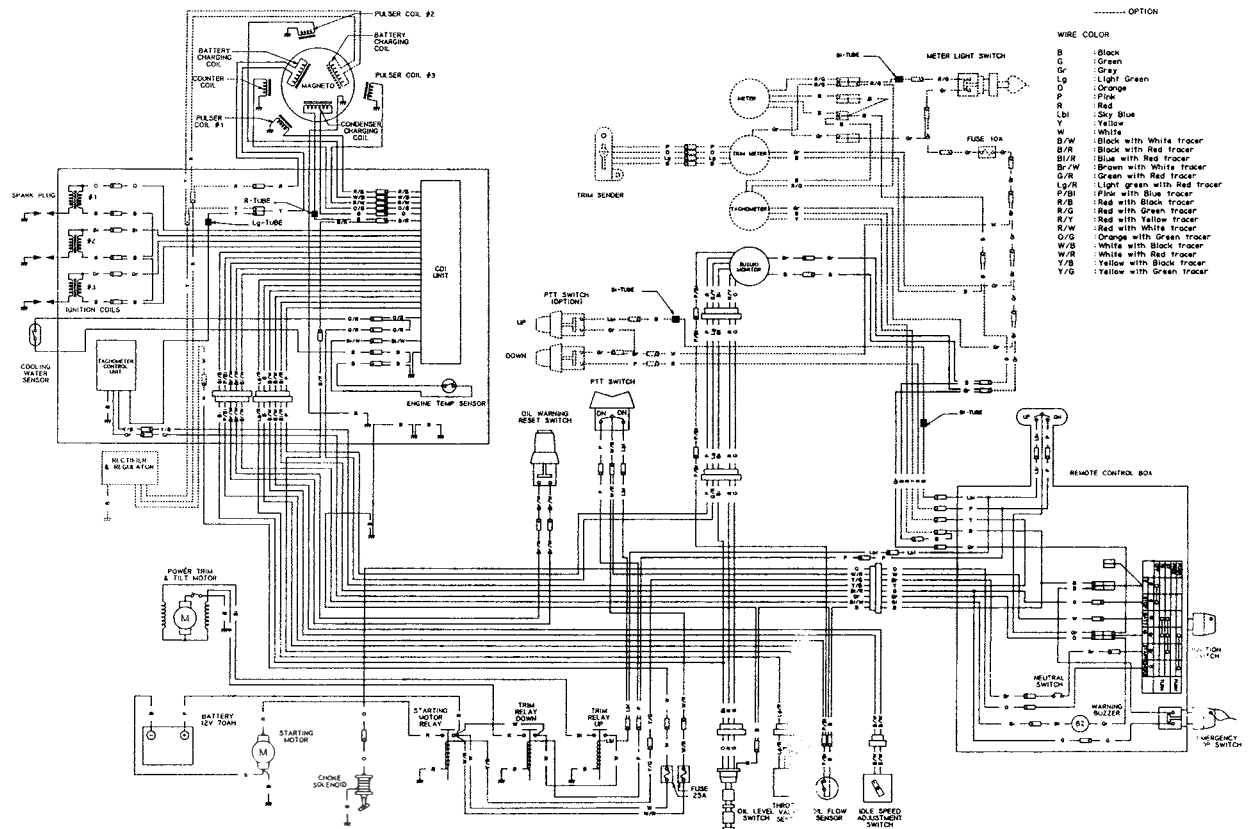


05005W46

## 1988 DT75CR and DT85CR Wiring Diagram

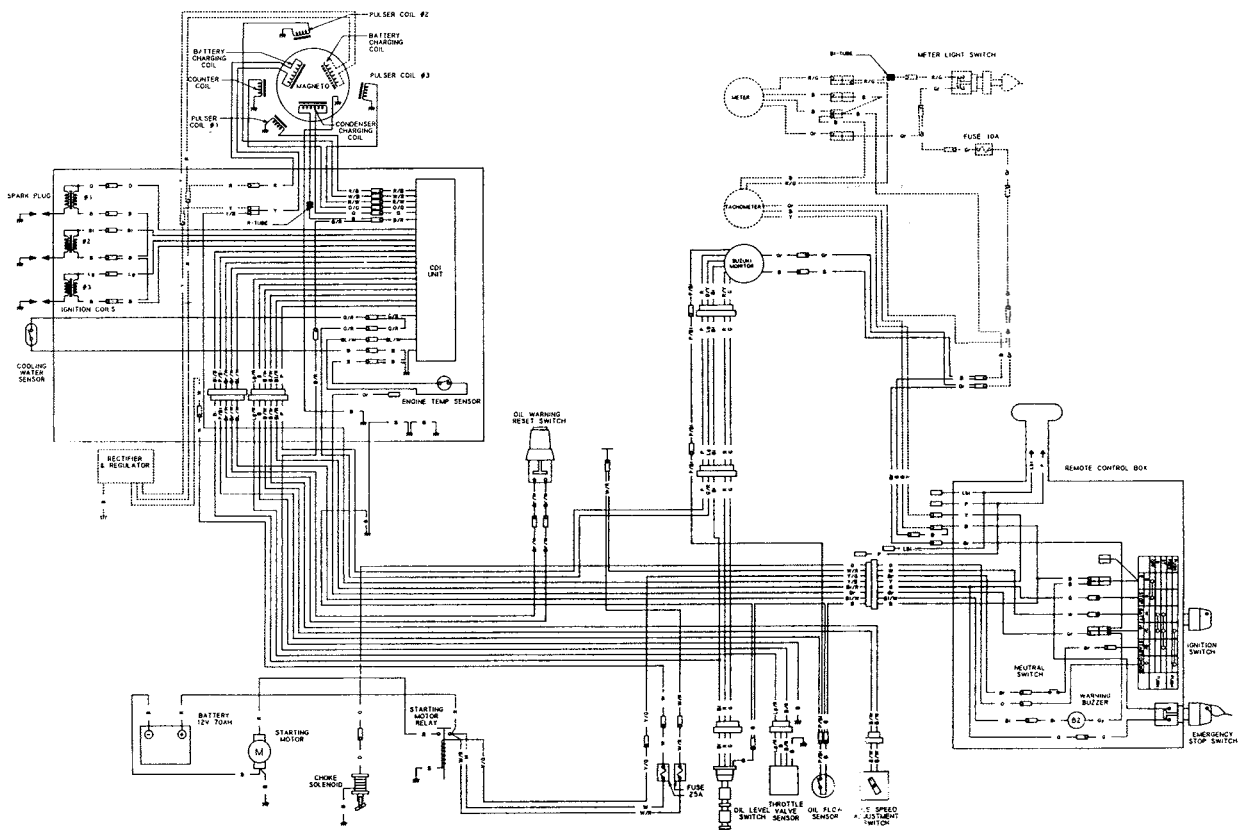

05005W47

## 1989 DT75CR and DT85CR Wiring Diagram

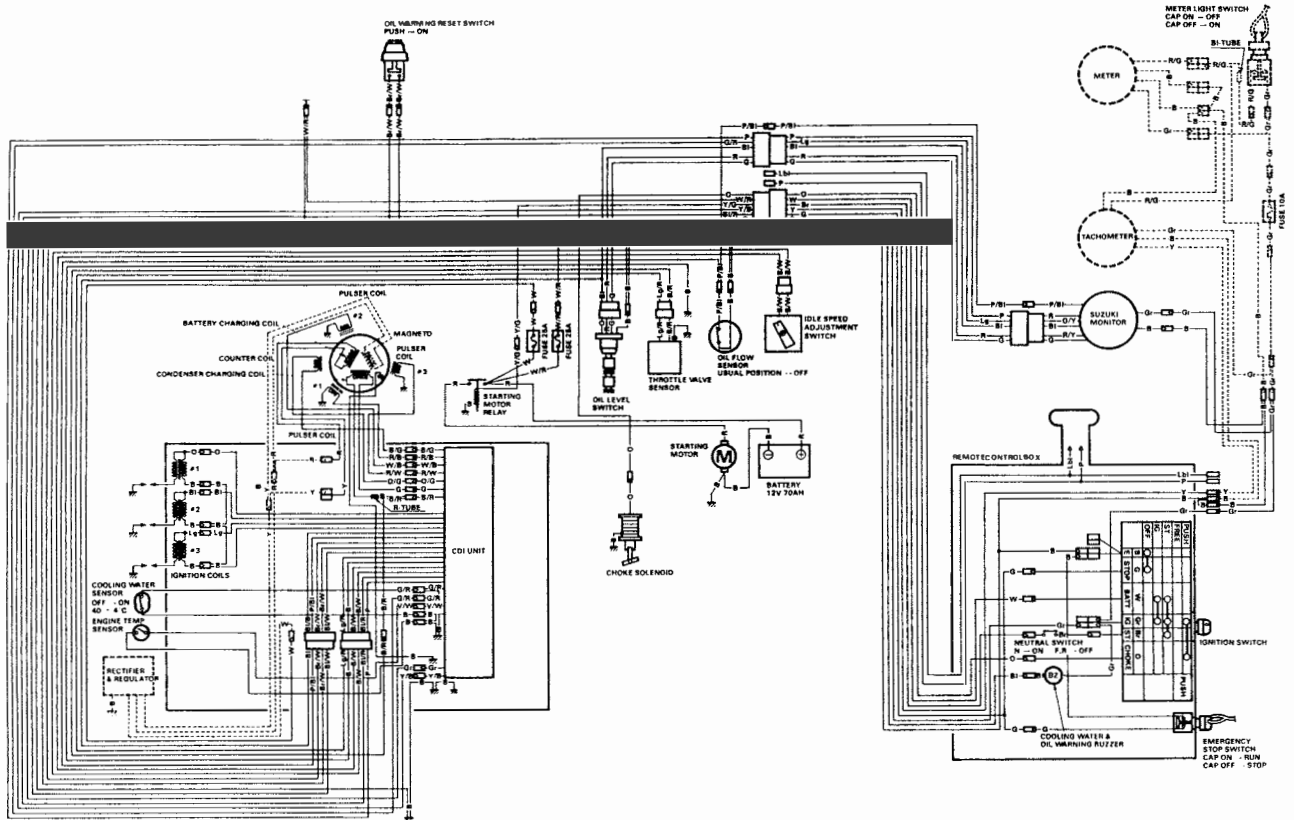


05005W48

## 1989 DT75TC and DT85TC Wiring Diagram

----- : Option


NOTE: The tachometer and trim meter are standard equipments for Australian version.

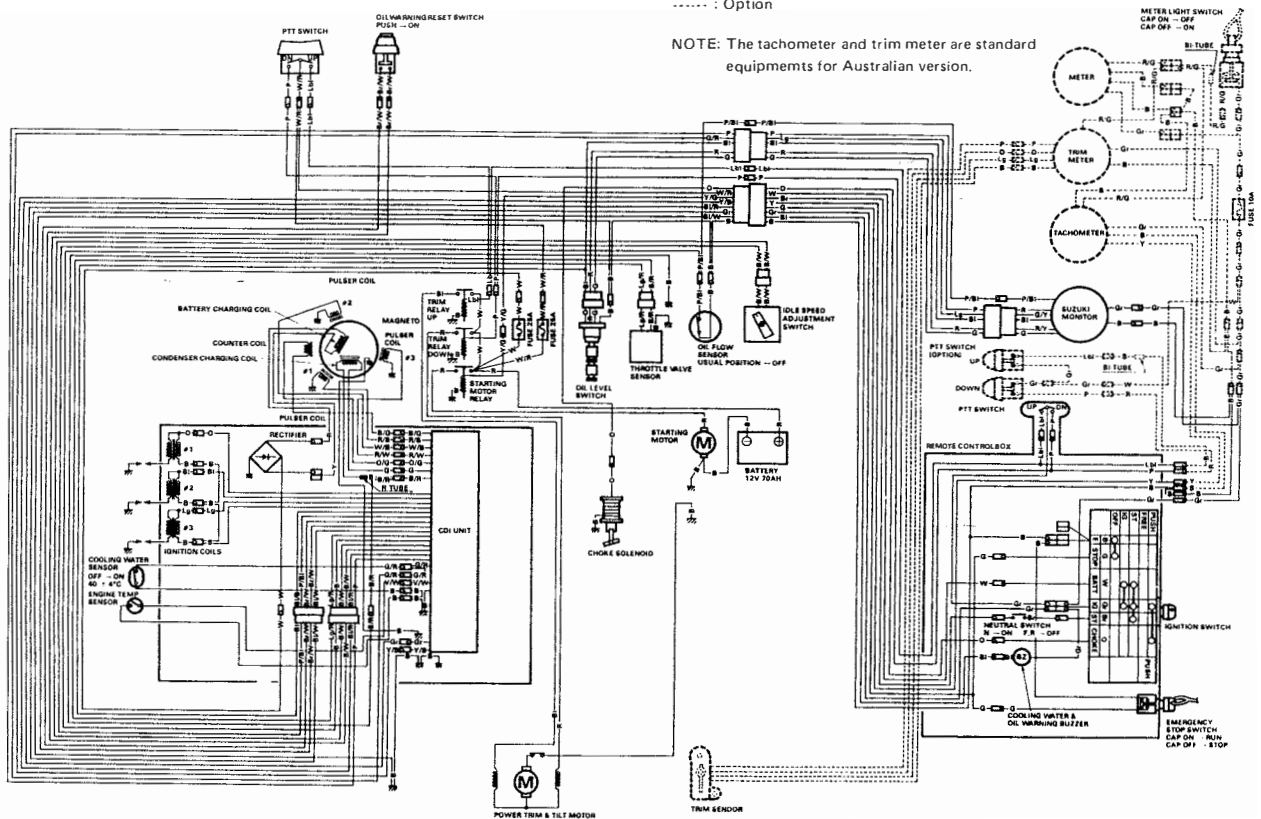


05005W49

# 5-72 IGNITION AND ELECTRICAL SYSTEMS

## 1990-91 DT75 and DT85 Wiring Diagram

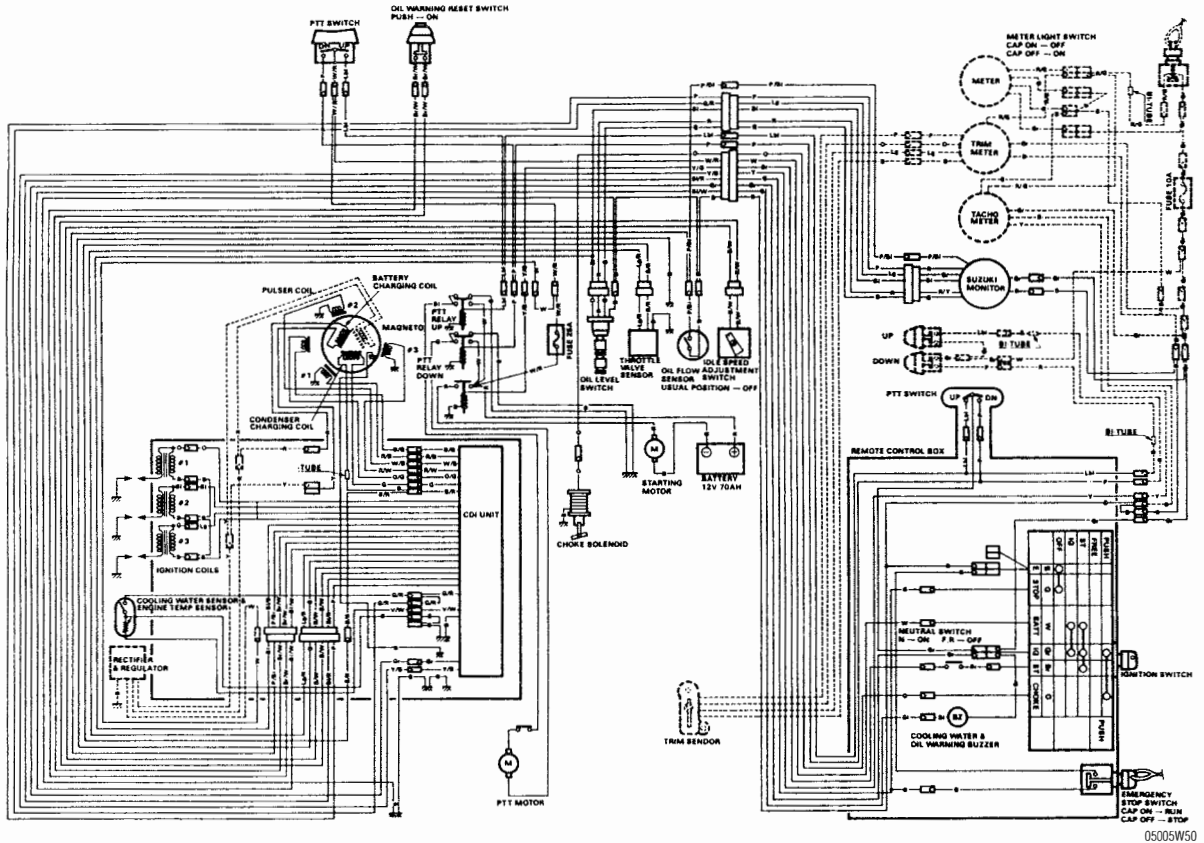


## 1992-94 DT75 and DT85 Wiring Diagram

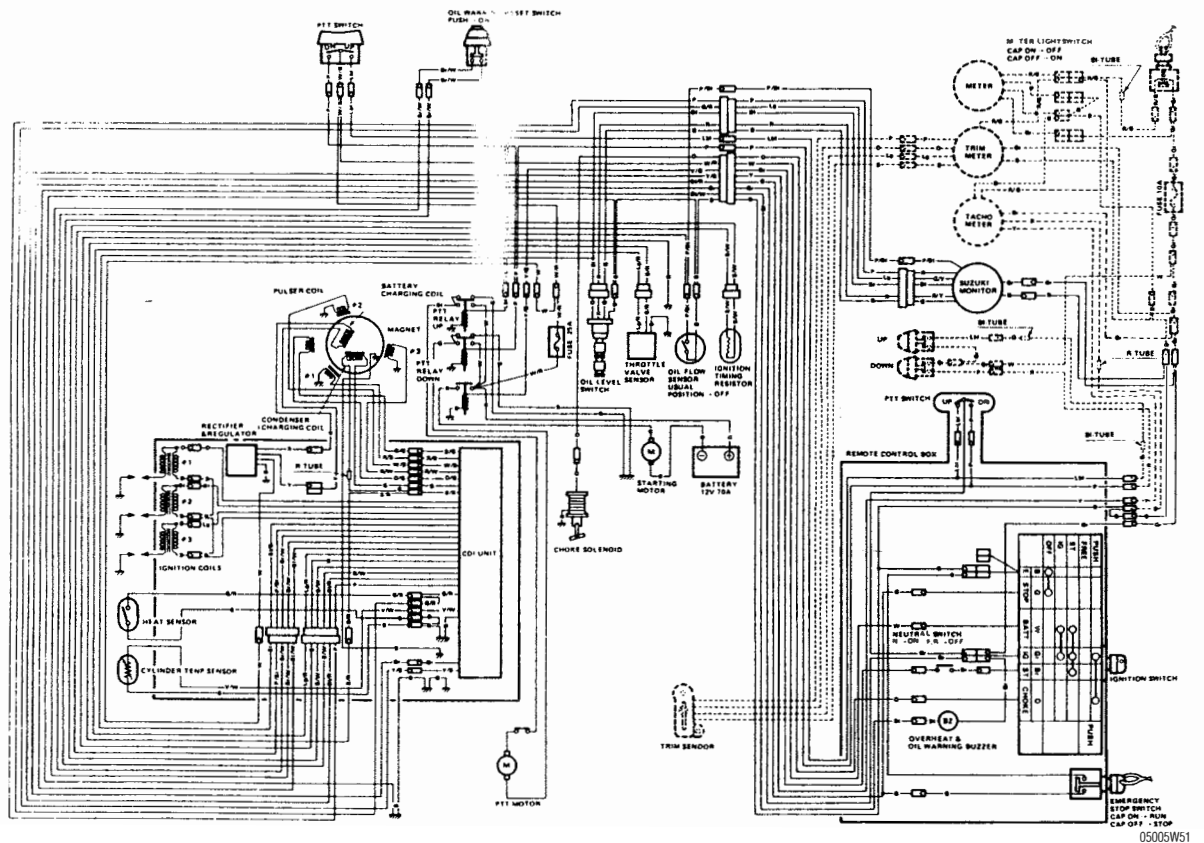

# IGNITION AND ELECTRICAL SYSTEMS 5-73

## 1995-97 DT75 and 1995-00 DT85 Wiring Diagram

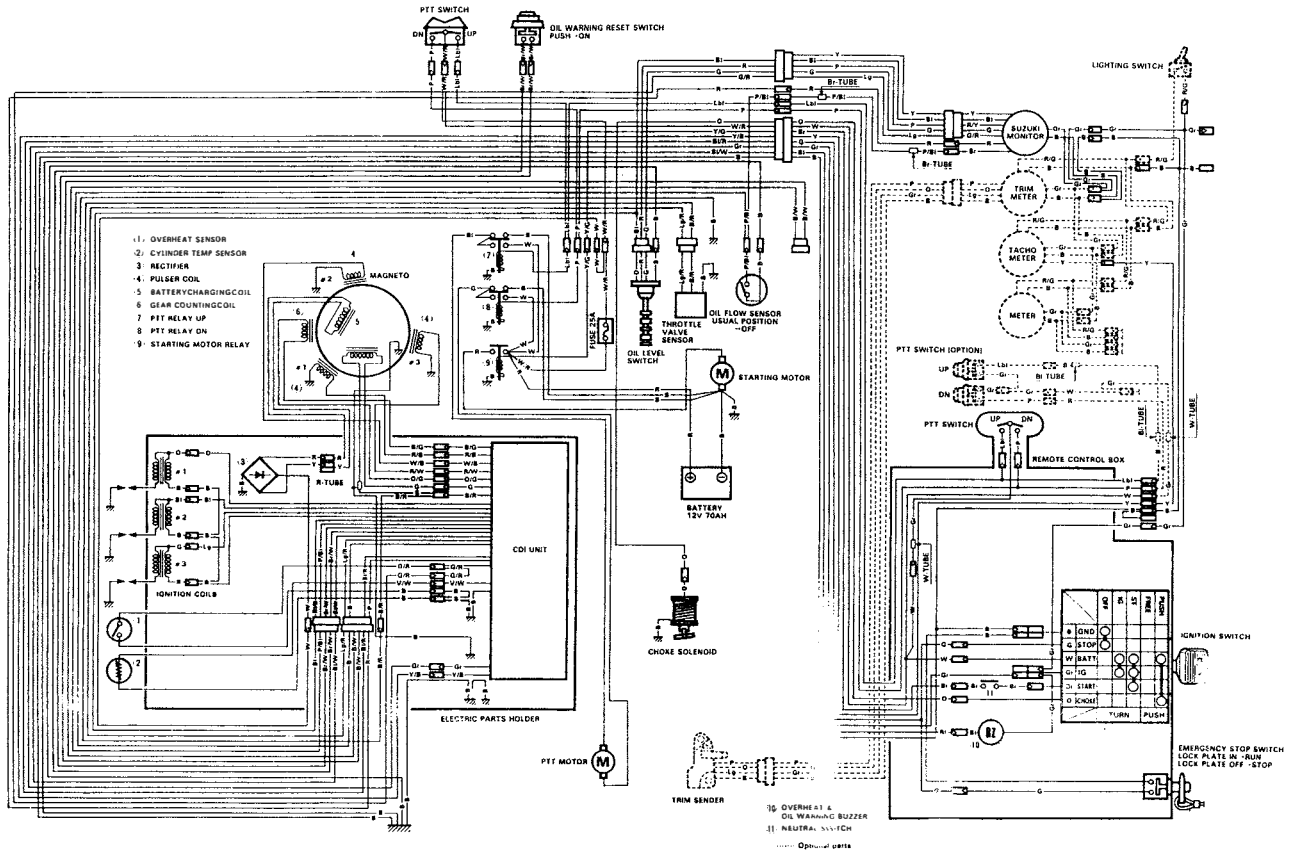

## 1989-91 DT90 and DT100 Wiring Diagram

