


System/Ignition Relay**Table 1: Fuse Box**

Pos	Description	Pos	Description
A	Trim Down Relay	F3	20 Amp Fuse (Fuel Pump)
B	Trim Up Relay	F4	15 Amp Fuse (Ignition)
C	Starter Relay	F5	5 Amp Fuse (Vessel Switch)
D	Fuel Pump Relay	F6	10 Amp Fuse (Trim Control)
E	Ignition Relay	F7	40 Amp Fuse (Instrument Panel)
F1	15 Amp Fuse (EVC)	F8	50 Amp Circuit Breaker (Trim Pump)
F2	20 Amp Fuse (ECM)	F9	20 Amp Fuse (Starter)

- Removal**
1. Turn the ignition OFF.
 2. Open the cover.
 3. Remove the system/ignition relay (E) from the socket.

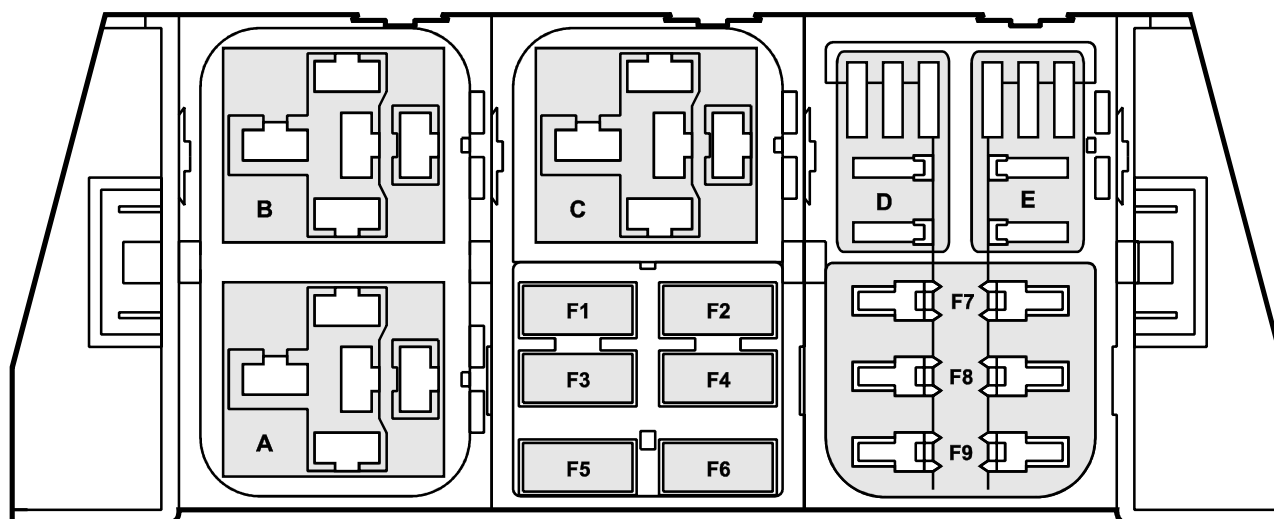

Caution! The ignition relay is an electrical component. Do Not soak in any liquid or solvent as damage may result.

- Installation**
1. Install the system relay in the socket.
 2. Close the cover.

Fuel Pump Relay

- Removal**
1. Turn the ignition OFF.
 2. Open the cover.
 3. Remove the fuel pump relay (D) from the socket.



Caution! The fuel pump relay is an electrical component. Do Not soak in any liquid or solvent as damage may result.

- Installation**
1. Install the fuel pump relay.