




Voltage Regulator/Rectifier Removal and Installation

1. Disconnect voltage regulator/rectifier wire connectors.
2. Remove mounting screws and remove voltage regulator/rectifier.
3. Reverse steps for installation (refer to wiring diagram **section 8** for correct wire connections).

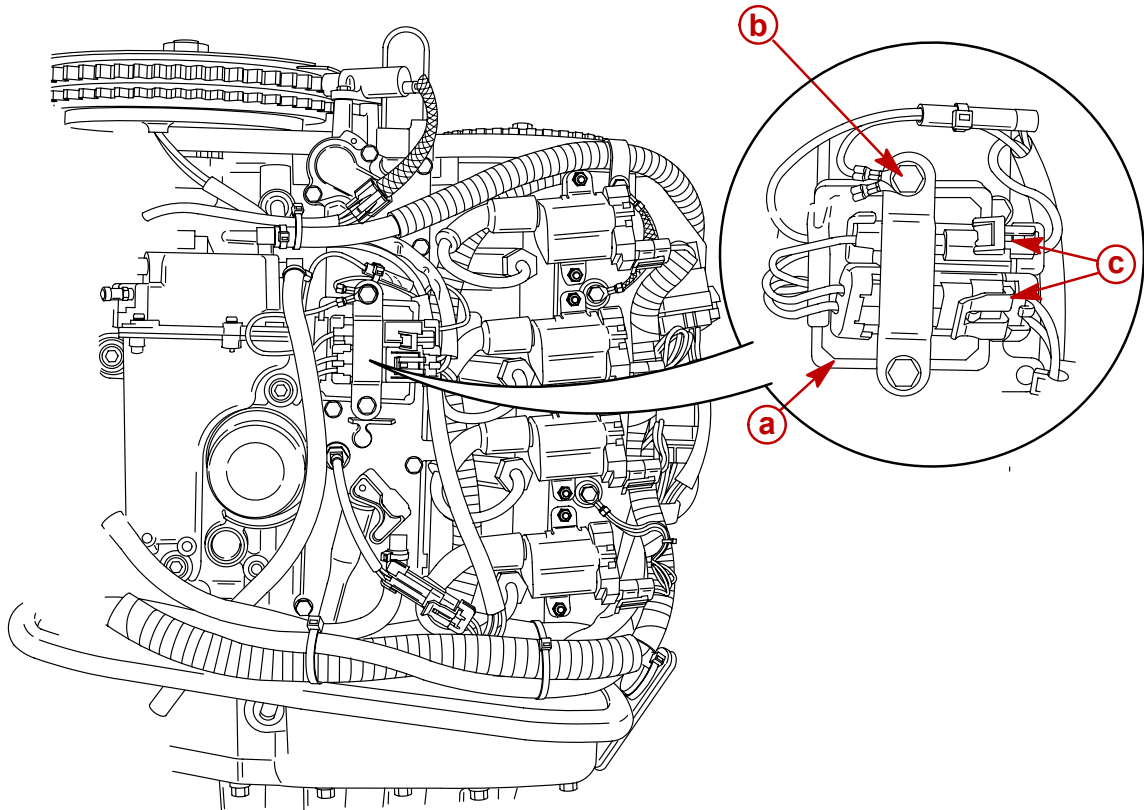

- a** - Voltage Regulator/Rectifier
- b** - Screw (2) M6 x 40
- c** - Connectors

Voltage Regulator/Rectifier Mounting Screw Torque

75 lb. in. (8.5 N·m)
