


ELECTRICAL COMPONENTS


(Starboard and port view)

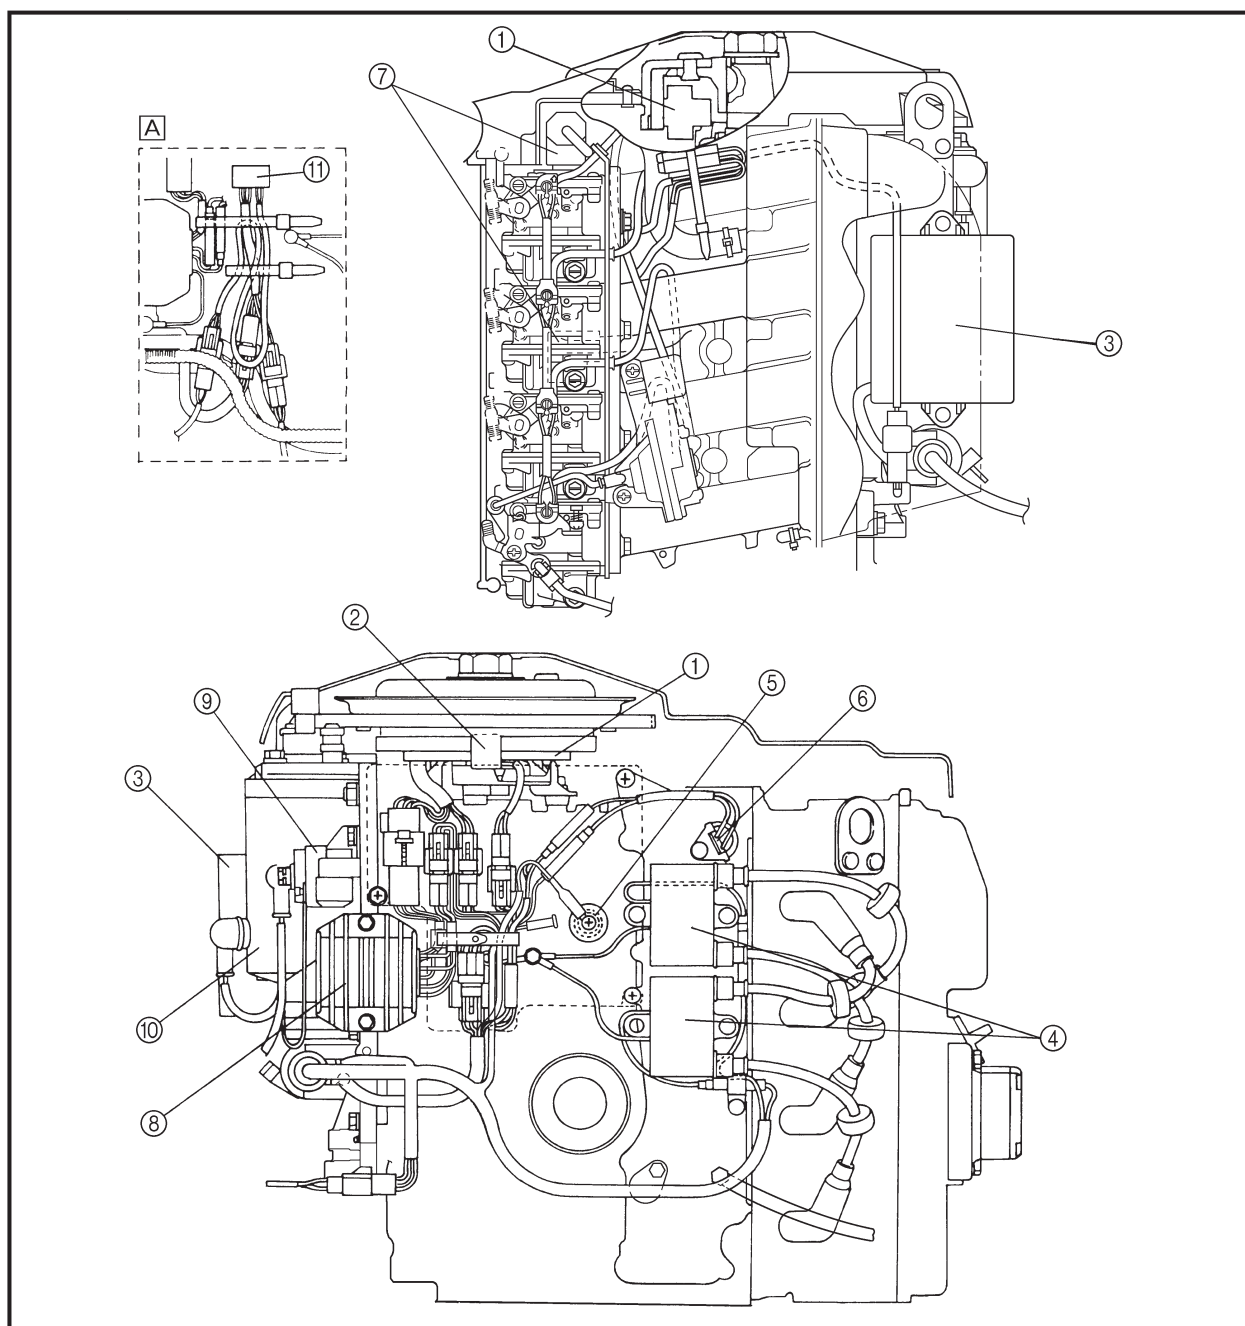


- ① Stator
- ② Pulser coil
- ③ CDI unit
- ④ Ignition coil
- ⑤ Oil pressure switch
- ⑥ Thermo switch
- ⑦ Positive temperature coefficient heater
- ⑧ Rectifier/regulator
- ⑨ Starter relay
- ⑩ Starter motor

- ⑪ Connector assembly

Ⓐ Tiller handle with PTT model

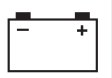

WIRE HARNESS

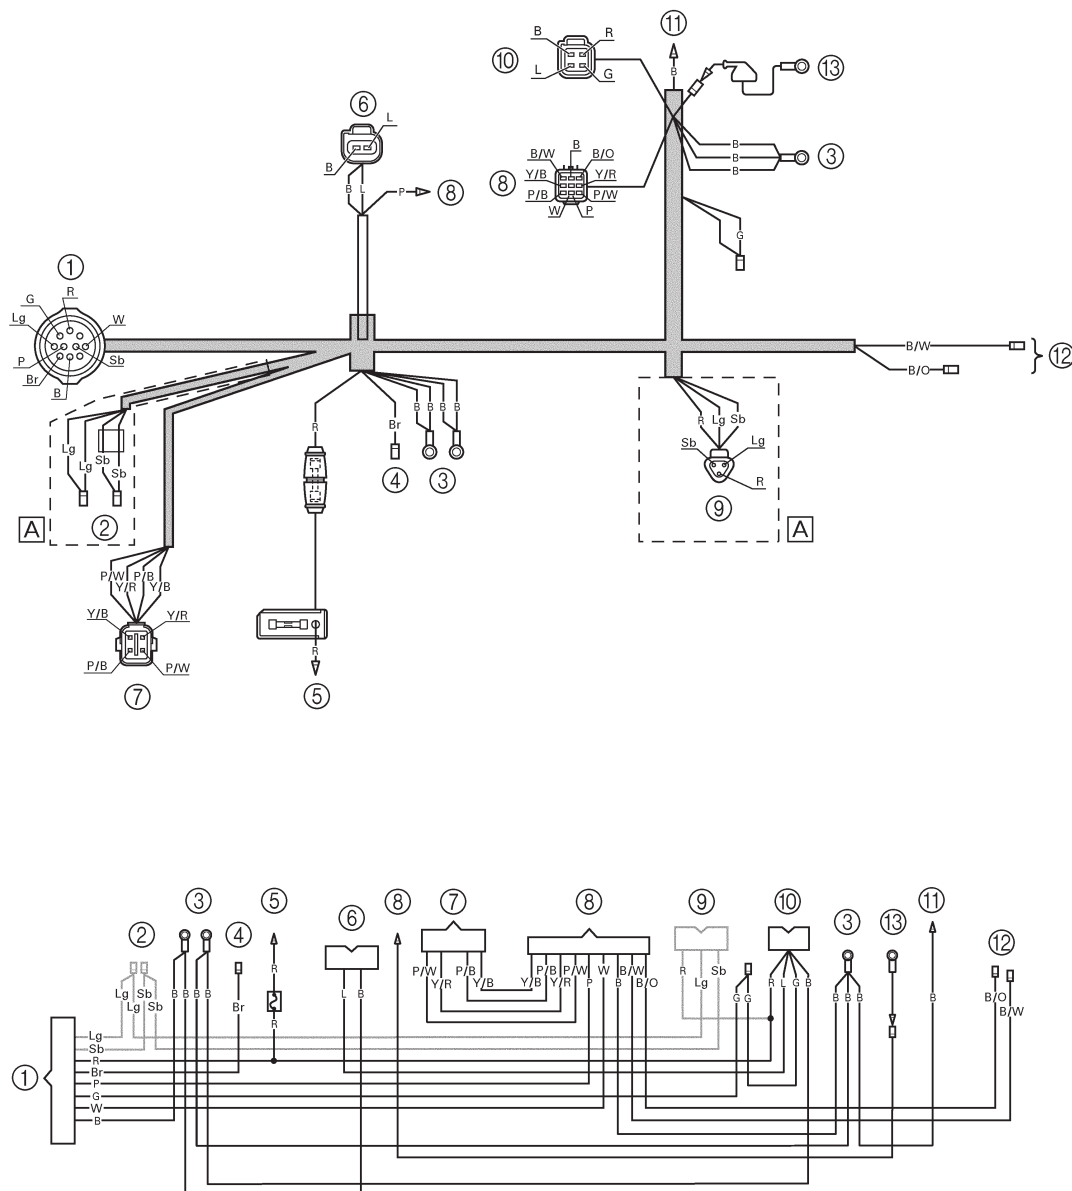


Connect to:

- ① Tiller handle main switch/
remote control box/
extension wire harness
- ② Power trim and tilt relay
- ③ Ground
- ④ Starter relay
- ⑤ Main positive power
source
- ⑥ Positive temperature
coefficient heater


- ⑦ Warning light assembly/
tachometer
- ⑧ CDI unit
- ⑨ Power trim and tilt
switch/trailer switch
- ⑩ Rectifier/regulator
- ⑪ Thermo switch
- ⑫ Ignition coil
- ⑬ Oil pressure switch

B : Black
 Br : Brown
 G : Green
 L : Blue
 W : White
 Br : Brown
 P : Pink
 R : Red
 Sb : Sky blue
 W : White
 B/O : Black/orange

B/W : Black/white
 P/B : Pink/black
 P/W : Pink/white
 Y/B : Yellow/black
 Y/R : Yellow/red

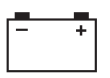

IGNITION SYSTEM

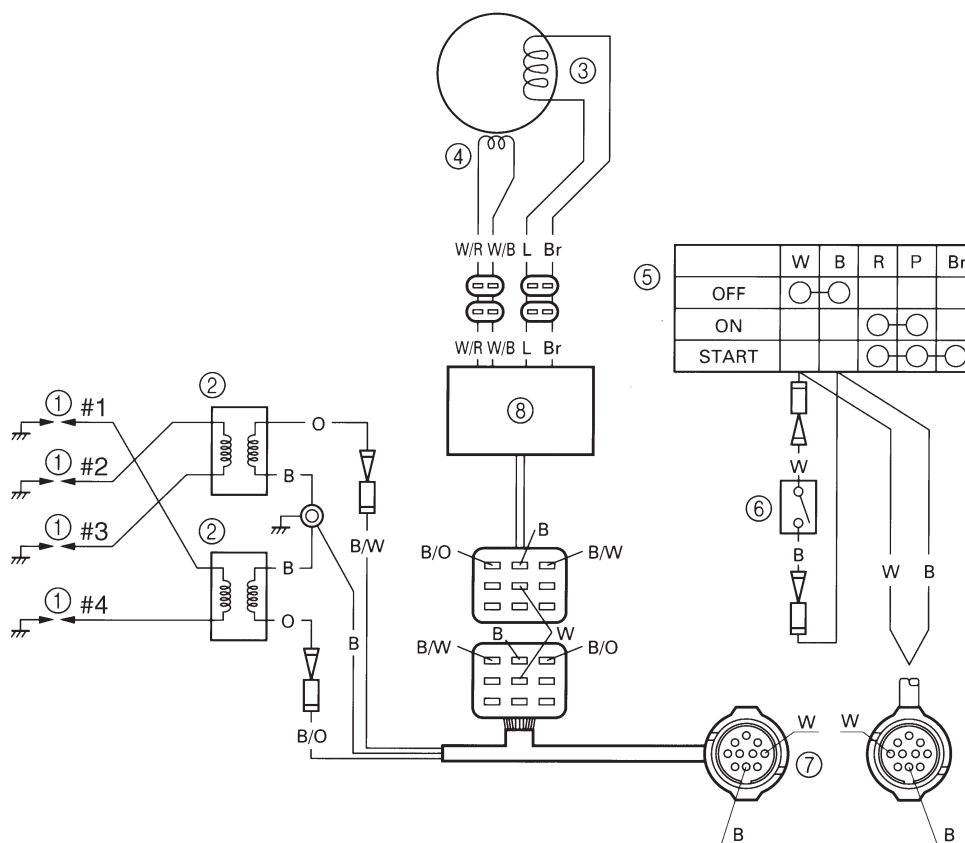

- ① Spark plug
- ② Ignition coil
- ③ Charge coil
- ④ Pulser coil
- ⑤ Main switch
- ⑥ Engine stop switch
- ⑦ 10P coupler
- ⑧ CDI unit

- B : Black
- Br : Brown
- L : Blue
- W : White
- B/O : Black/orange
- B/W : Black/white
- W/B : White/black
- W/R : White/red