
MCM 4.3L AND 4.3LH BRAVO MODELS

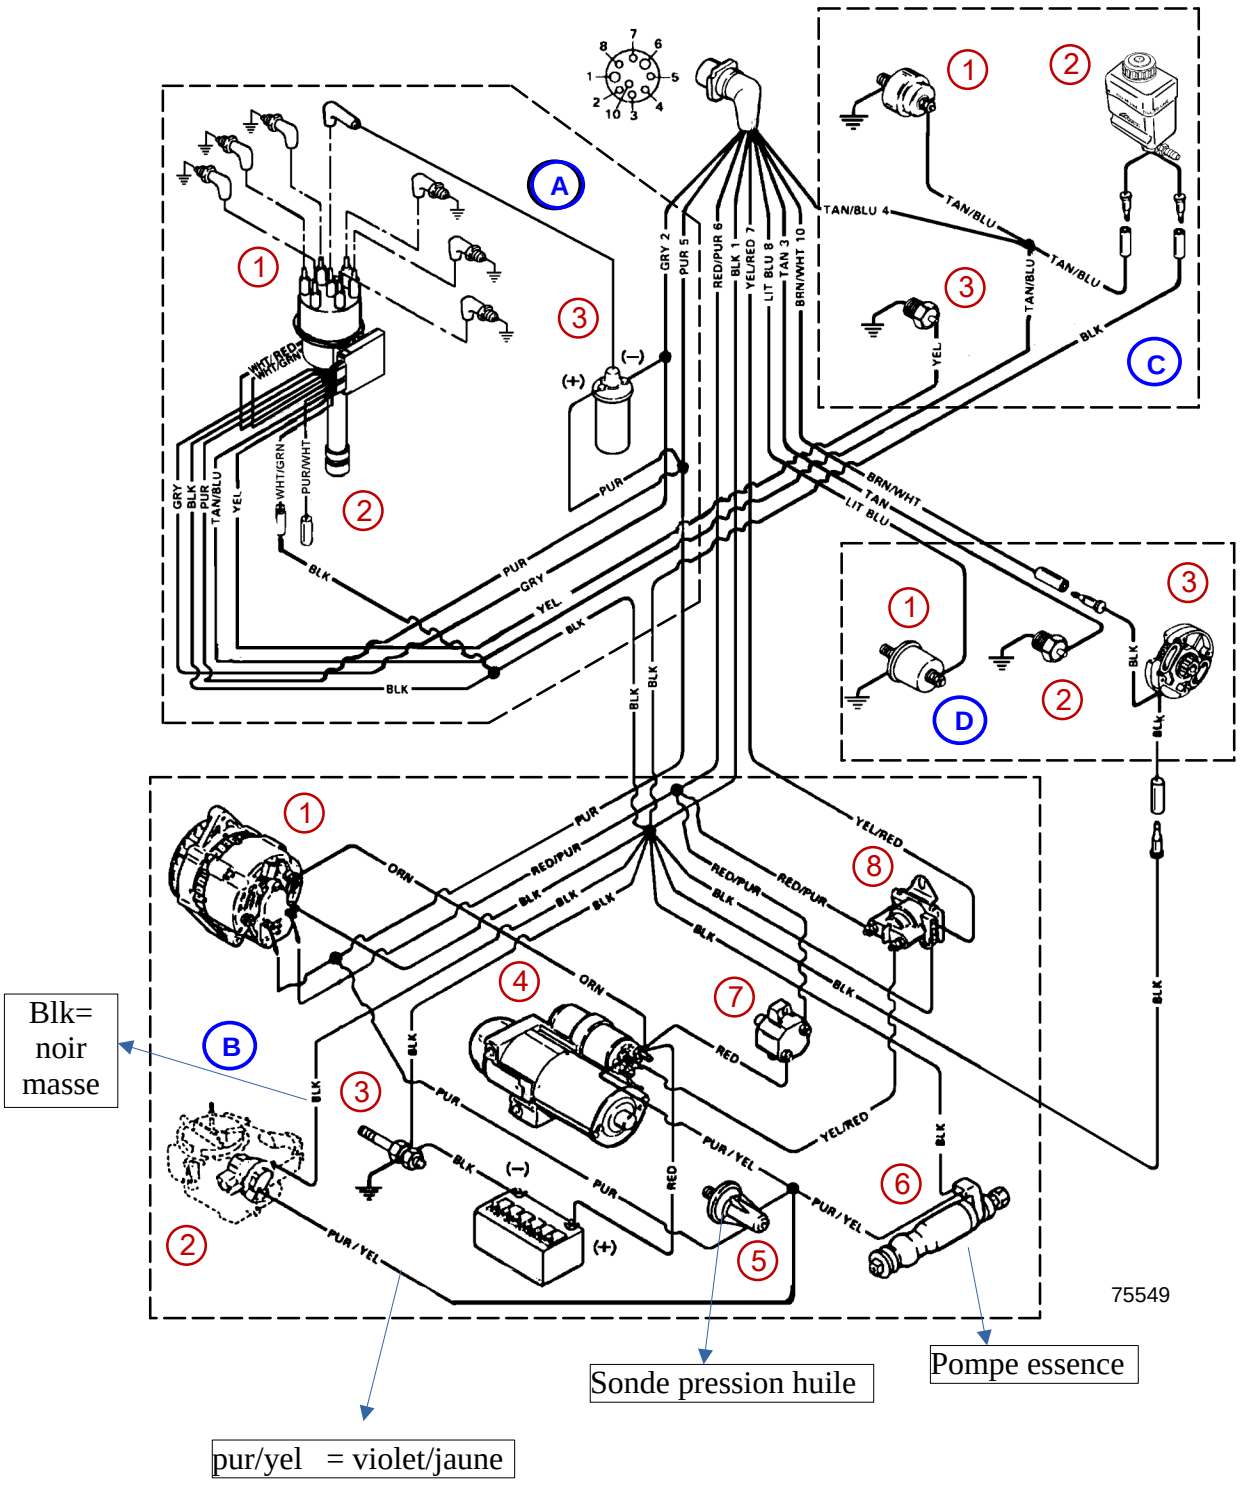

A - Ignition Components

1 - Distributor
2 - Timing Lead
3 - Ignition Coil

B - Starting, Charging and Choke Components

1 - Alternator
2 - Electric Choke
3 - Ground Stud
4 - Starter Motor
5 - Oil Pressure Switch
6 - Fuel Pump
7 - Circuit Breaker
8 - Starter Slave Solenoid

C - Audio Warning Components

1 - Oil Pressure Switch
2 - Drive Unit Gear Lube Monitor
3 - Water Temperature Sender

D - Instrumentation Components

1 - Oil Pressure Sender
2 - Water Temperature Sender
3 - Trim Sender