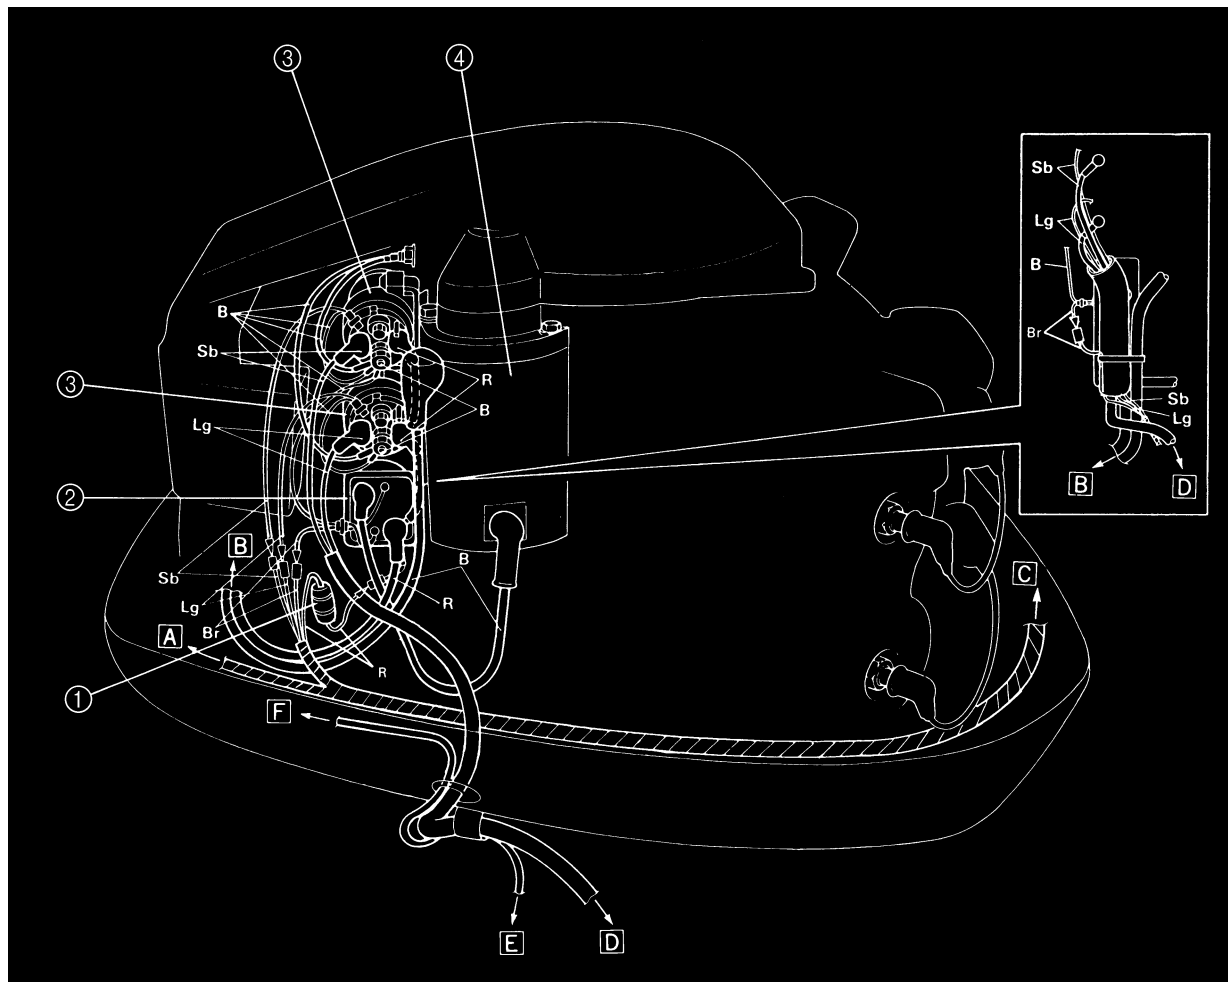





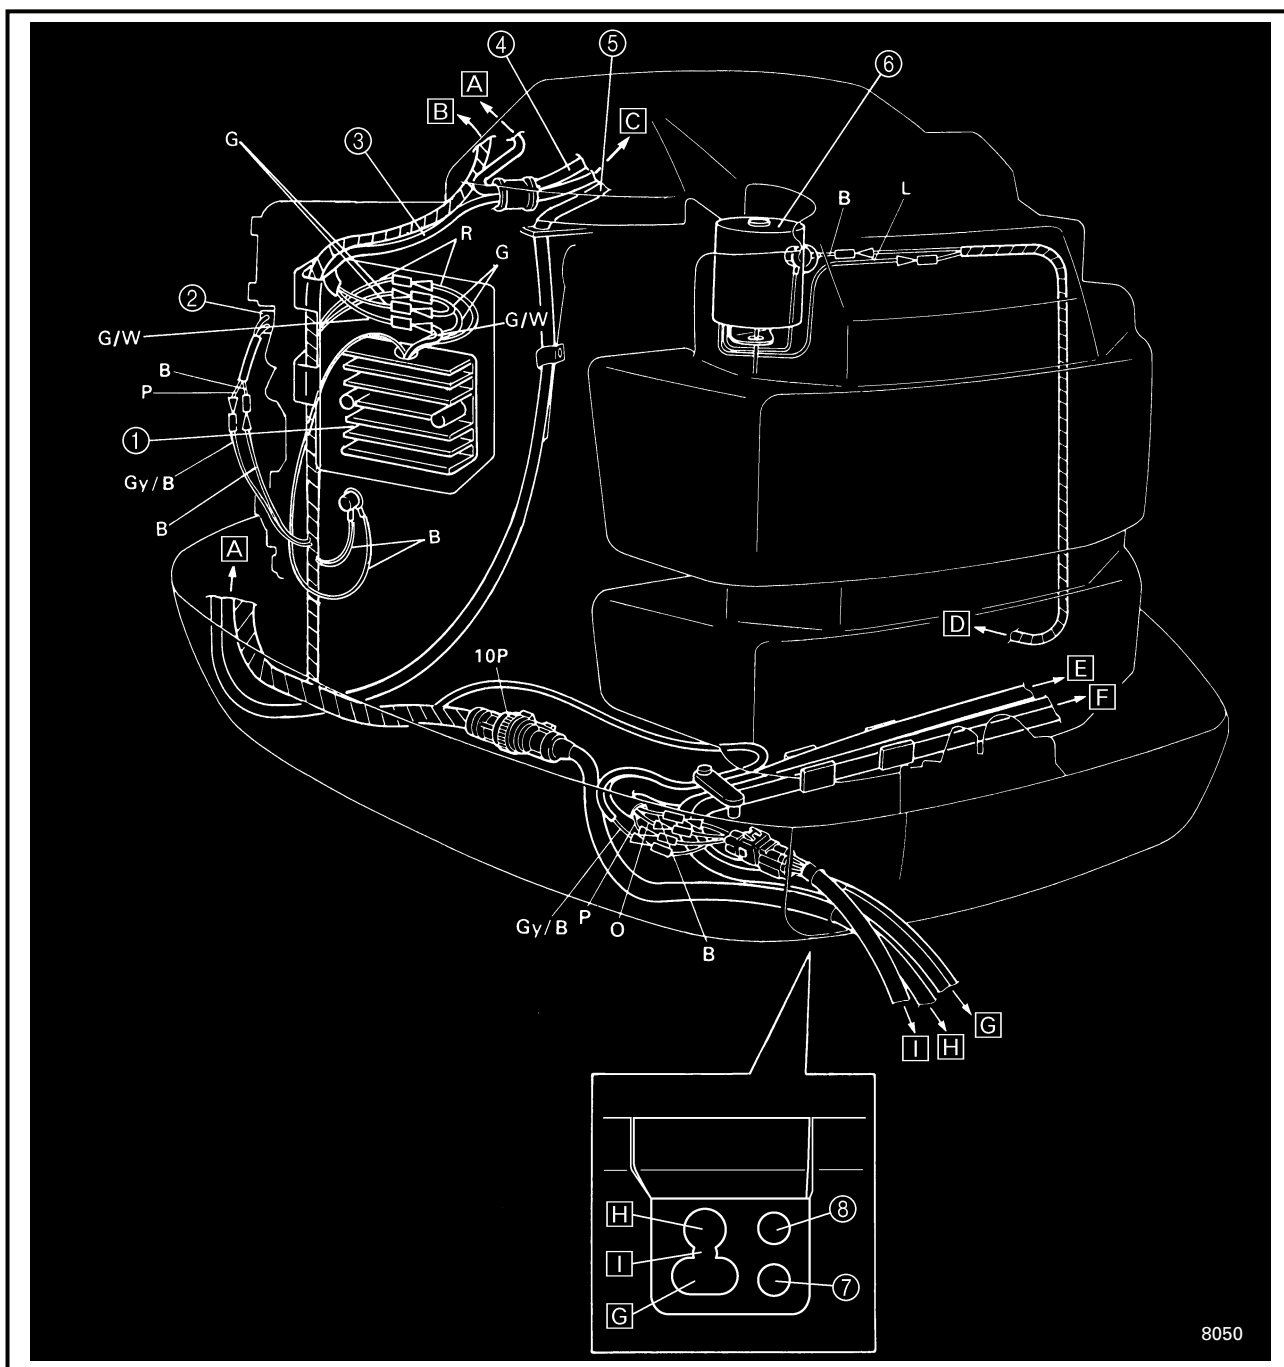
**ELECTRICAL COMPONENTS (PRE-MIXED AND 115BETO MODELS)
(Port view)**



- ① Fuse (20A)
- ② Starter relay
- ③ Power trim and tilt relay
- ④ Starter motor

- [A] To fuel enrichment valve
- [B] To battery
- [C] To CDI unit and 10P coupler
- [D] To power trim and tilt motor
- [E] To trim sensor
- [F] To trim meter

- B : Black
- Br : Brown
- Lg : Light green
- R : Red
- Sb : Sky blue


(Starboard view)


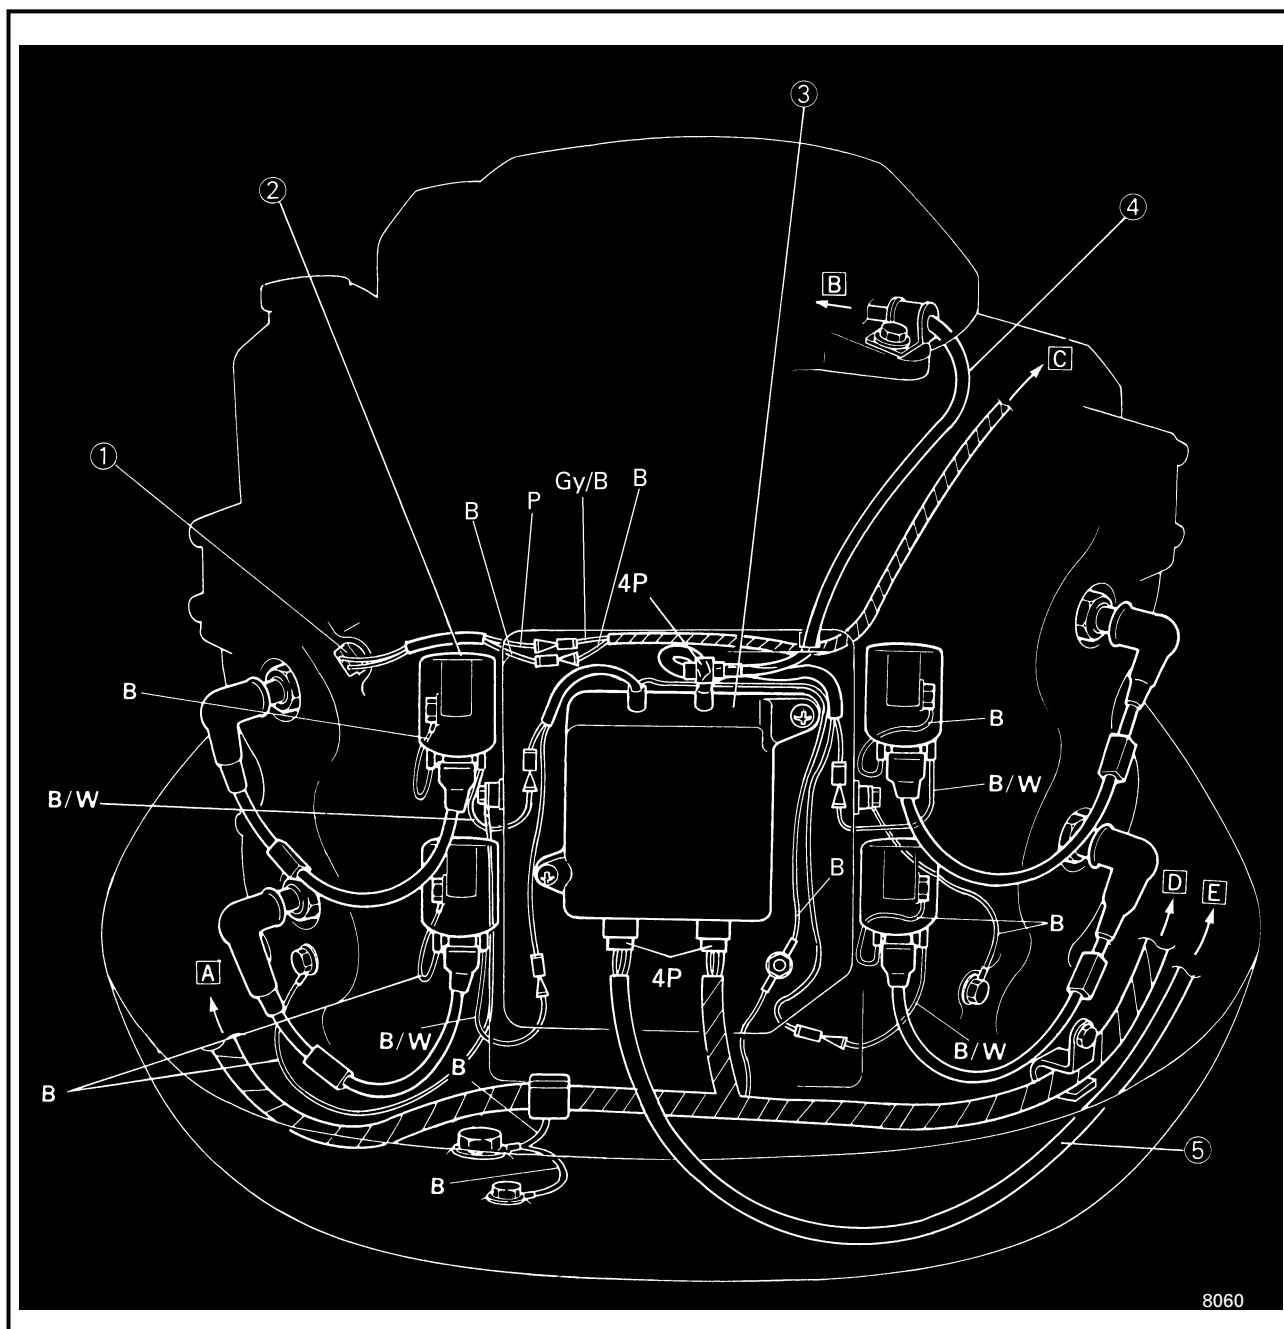
8050

- ① Rectifier/regulator
- ② Thermo switch
- ③ Lighting coil lead
- ④ Charge coil lead
- ⑤ Pulser coil lead
- ⑥ Fuel enrichment valve
- ⑦ Shift cable
- ⑧ Throttle cable

- [A] To CDI unit
- [B] To thermo switch
- [C] To starter assembly
- [D] To wire harness
- [E] To trim sensor
- [F] To starter relay and starter motor
- [G] To battery
- [H] To remote control
- [I] To trim meter

- B : Black
- G : Green
- L : Blue
- O : Orange
- P : Pink
- R : Red
- G/W : Green/white
- Gy/B : Gray/black

(Aft view)



- ① Thermo switch
- ② Ignition coil
- ③ CDI unit
- ④ Charge coil lead
- ⑤ Pulser coil lead

- ☐ A To relay assembly
☐ B To charge coil
☐ C To wire harness
☐ D To 10P coupler
☐ E To pulser coil

- B : Black
P : Pink
B/W : Black/white
Gy/B : Gray/black