

POWER TRIM AND TILT SYSTEM CHECKING THE POWER TRIM AND TILT FLUID LEVEL

Check:




- Power trim and tilt fluid level
Level is low → Add power trim and tilt fluid to the proper level.



Recommended power trim and tilt fluid
ATF Dexron II

⚠ WARNING

After tilting up the outboard, be sure to support it with the tilt stop levers. Otherwise, the outboard could suddenly lower if the power trim and tilt unit should lose fluid pressure.

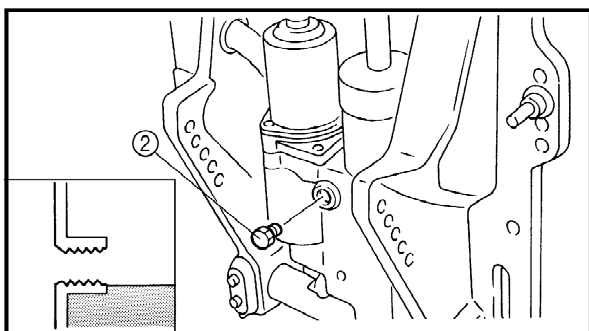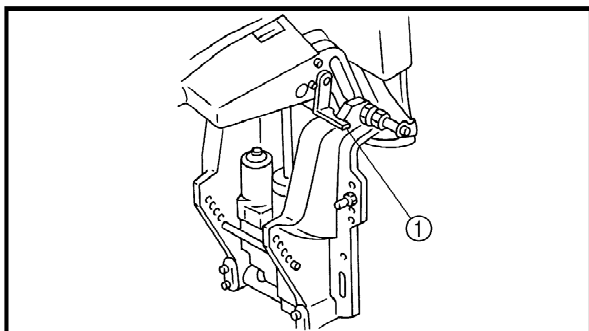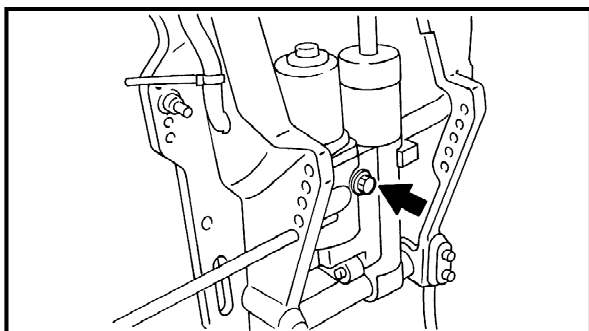

Checking steps

- (1) Fully tilt up and tilt down the power trim and tilt unit four to five times.
- (2) Tilt the outboard all the way up and lock it with the tilt stop levers ①.
- (3) Remove the reservoir cap ② and check the fluid level.

NOTE:

The fluid level should be directly below the check hole as shown.

- (4) Add power trim and tilt fluid if needed, and then install the reservoir cap.



Reservoir cap
6.5 N • m (0.65 kgf • m, 4.7 ft • lb)