




Water Pressure Check

Using Water Pressure Gauge 91-79250A2, cut compressor water inlet hose and install tee fitting (provided) as shown.

NOTE: This is also the same location for installing the water pressure hose for a dash mounted water pressure gauge.

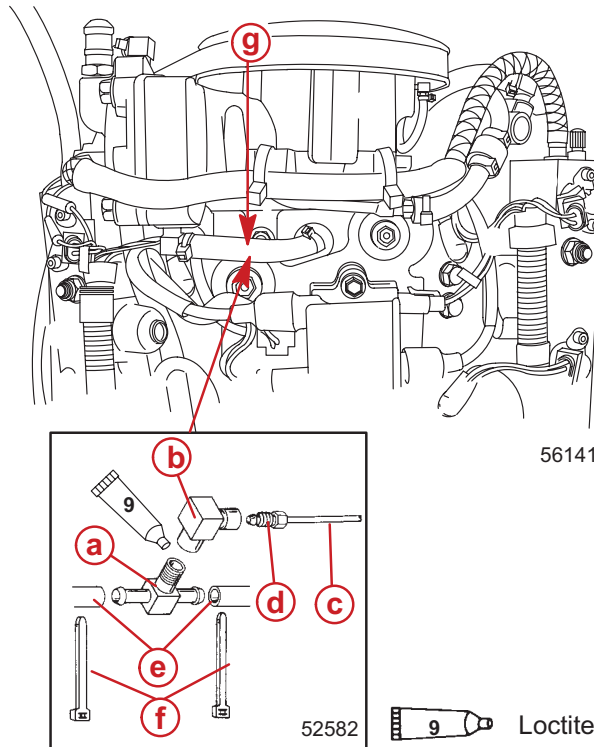

Loctite Pipe Sealant w/Teflon-592

- a** - Tee Fitting (22-64706)
- b** - Fitting (22-63651)
- c** - Tubing
- d** - Compression Nut (22-63670)
- e** - Compressor Water Inlet Hose (Cut and splice in this location)
- f** - Sta-straps
- g** - Compressor Water Inlet Hose

⚠ WARNING

Shut off engine and refer to troubleshooting chart if water pressure is not within specification. DO NOT exceed 3000 RPM in neutral.

Idle	1.0 – 3.0 PSI (6.8 – 20.5 kPa)
Poppet Valve Opening	4 – 9 PSI (27.4 – 61.6 kPa)
W.O.T.	12.0 PSI (82.1 kPa) Minimum