


WIRE HARNESS INSTALLATION

Contained parts

Item	Part name	Part number	Q'ty
(A)	Monitor-tachometer	34200-99E00	1
(B)	Monitor gauge wire	36682-92E00	1
(C)	Trim meter wire harness	36682-90J00	1
(D)	Instrument wire harness	36630-92E00	1

Procedure


- (1) Remove the both side lower covers. (See page 5.)
- (2) Route the following items through the grommet ① as shown position.
 - Remote control wire harness ②.
 - Monitor gauge wire harness ③.
 - Trim meter wire harness ④.
 - Battery cable ⑤.
 - Speed meter pickup tube ⑥.

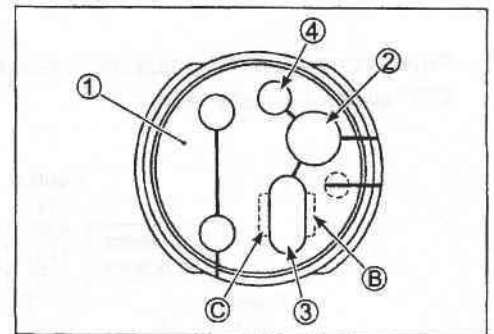

NOTE:

For the procedure to install optional trim sender/meter and related parts, refer to the "TRIM SENDER KIT INSTALLATION INSTRUCTIONS" that comes supplied with each unit of trim sender kit.

- (3) Connect the monitor gauge wire harness ③ to the engine side, then press fit the connector into the holder ⑤.
- (4) Connect the remote control wire harness ② and PTT wires ⑥ to the engine side, then press fit the connector into the holder ⑦. Route the monitor gauge wire harness ③ and PTT wires ⑥ behind the connector of ②.
- (5) Push the grommet ① into the front panel.

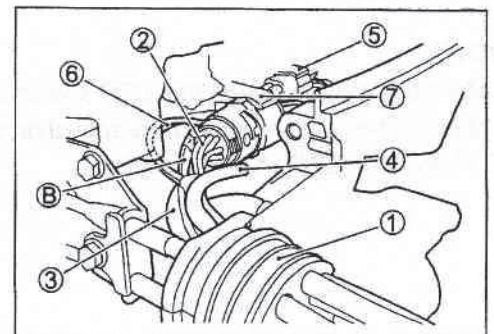

NOTE:

For the remote control box/meter/wire harness connection, refer to the WIRING DIAGRAM on page 16.